



USER MANUAL UMAX100281
Version 1.0.1

BLDC Motor Controller

CANopen®

USER MANUAL

P/N: AX100281

VERSION HISTORY

Version	Date	Author	Modifications
1.0.0	Oct. 11, 2022	Antti Keränen	Initial Draft
1.0.1	Apr. 13, 2026	M Ejaz	Made legacy updates Updated dimensional drawing Updated technical specifications Reformatting

ACRONYMS

BATT +/-	Battery positive (a.k.a. Vps) or Battery Negative (a.k.a. GND)
DIN	Digital Input used to measure active high or low signals
EMCY	Diagnostic Message (from CANopen standard)
EA	Axiomatic Electronic Assistant (A Service Tool for Axiomatic ECUs)
ECU	Electronic Control Unit (from SAE J1939 standard)
GND	Ground reference (a.k.a. BATT-)
I/O	Inputs and Outputs
PWM	Pulse Width Modulation
RPM	Rotations per Minute
UIN	Universal input used to measure voltage, current, frequency or digital inputs
Vps	Voltage Power Supply (a.k.a. BATT+)
%dc	Percent Duty Cycle (Measured from a PWM input)

TABLE OF CONTENTS

1.1.	CANopen PDS FSA.....	9
1.2.	Input Function Blocks	12
1.3.	PID Controller Block	19
1.4.	Diagnostics	21
1.5.	Miscellaneous Function Block	22
1.6.	Available Control Sources	24
2.1.	Dimensions and Pinout.....	25
3.1.	Node ID and Baud rate.....	27
3.1.1.	LSS Protocol to Update	27
3.2.	Communication Objects (DS-301).....	31
3.2.1.	1000h Device Type.....	32
3.2.2.	1001h Error Register	32
3.2.3.	1002h Manufacturer Status Object.....	32
3.2.4.	1003h Pre-Defined Error Field.....	32
3.2.5.	1010h Store Parameters.....	32
3.2.6.	1011h Restore Parameters	33
3.2.7.	1016h Consumer Heartbeat Time	33
3.2.8.	1017h Producer Heartbeat Time	33
3.2.9.	1018h Identity Object.....	33
3.2.10.	1020h Verify Configuration	33
3.2.11.	1029h Error Behavior.....	34
3.2.12.	1400h RPDO 1 Communication Parameters	34
3.2.13.	1401h RPDO 2 Communication Parameters	34
3.2.14.	1402h RPDO 3 Communication Parameters	34
3.2.15.	1403h RPDO 4 Communication Parameters	34
3.2.16.	1600h RPDO 1 Mapping Parameters.....	35
3.2.17.	1601h RPDO 2 Mapping Parameters.....	35
3.2.18.	1602h RPDO 3 Mapping Parameters.....	35
3.2.19.	1603h RPDO 4 Mapping Parameters.....	35
3.2.20.	1800h TPDO 1 Communication Parameters.....	35
3.2.21.	1801h TPDO 2 Communication Parameters	36
3.2.22.	1802h TPDO 3 Communication Parameters	36
3.2.23.	1803h TPDO 4 Communication Parameters	36
3.2.24.	1A00h TPDO 1 Mapping Parameters.....	36
3.2.25.	1A01h TPDO 2 Mapping Parameters.....	36
3.2.26.	1A02h TPDO 3 Mapping Parameters.....	37
3.2.27.	1A03h TPDO 4 Mapping Parameters.....	37
3.3.	Application Objects (DS-402 Motor Control and DS-404 Inputs & PID).....	38
3.4.	Manufacturer Objects	45
APPENDIX A - TECHNICAL SPECIFICATION.....		A-1

Table 1 – Object 3F12h – Commutation Sequence Options..... 10

Table 2 – Commutation Sequence Phase Drive States vs Steps (Hall readings) 10

Table 3 – Object 6112h - AI Operating Mode Options 12

Table 4 – Object 6110h - AI Sensor Type Options..... 13

Table 5 – AI Input Range Options Depending on Sensor Type 13

Table 6 – Pullup/Pulldown Resistor Options 13

Table 7 – Debounce Time Options..... 13

Table 8 – Object 61A0h - AI Filter Type Options..... 13

Table 9 – AI Object Defaults Based on Sensor Type and Input Range 15

Table 10 – AI Object Ranges Based on Sensor Type and Input Range 16

Table 11 – DI Pullup/Down Options 17

Table 12 – Object 6002h DI Polarity 8 Input Lines Options 18

Table 13 – PID Response Options 20

Table 14 – EMCY codes..... 21

Table 15 – Available Control Sources and Numbers 24

Table 16 – Scaling Limits per Control Source 24

Table 17 – AX100281 Connector Pinout..... 26

Table 18 – LSS Baud rate Indices..... 29

Figure 1 – AX100281 Block Diagram 8
Figure 2 – CANopen PDS FSA and Motor Control Objects 9
Figure 3 - Sensorless drive startup steps 11
Figure 4 – Analog Input Objects 12
Figure 5 – Analog Input Linear Scaling FV to PV 15
Figure 6 – Digital Input Objects 17
Figure 7 – Discrete Input Hysteresis 17
Figure 8 – Analog Input Reads as Digital 18
Figure 9 – PID Control Objects 19
Figure 10 – Miscellaneous Objects 22
Figure 11 – AX100281 Dimensional Drawing 25

REFERENCES

- TDAX100281 Technical Datasheet, Axiomatic Technologies
- UMAX07050x User Manual, Axiomatic Electronic Assistant and USB-CAN, Axiomatic Technologies

1. OVERVIEW OF CONTROLLER

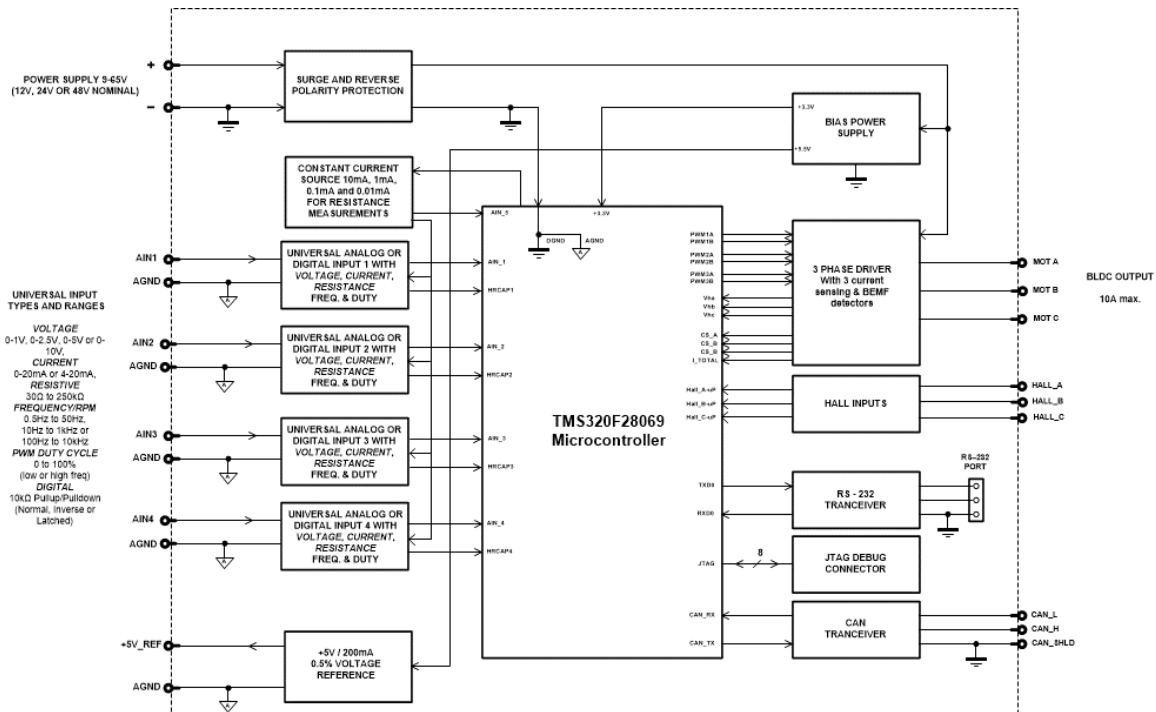


Figure 1 – AX100281 Block Diagram

The BLDC Motor Controller has four Universal Inputs that can be configured to measure voltage, current, frequency, PWM duty cycle or digital voltage level (on/off). Measured input data can be sent to a CANopen network as is or used in the BLDC controller function blocks for controlling how the BLDC motor is driven.

In this document the configurable properties of the ECU are divided into function blocks, namely Input Function Block, Diagnostic Function Block, CAN Transmit Message Function Block and CAN Receive Message Function Block. These function blocks are presented in detail in next subchapters.

All CANopen objects supported by the AX100281 are user configurable using standard commercially available tools that can interact with a CANopen® Object Dictionary via an .EDS file.

1.1. CANopen PDS FSA

The firmware implements CANopen PDS FSA for controlling the motor. The details of the PDS FSA is described in **CiA 402: Drives and motion control device profile**. This section describes only the main points. The inputs to the PDS FSA are controlled using manufacturer objects for implementing more control options.

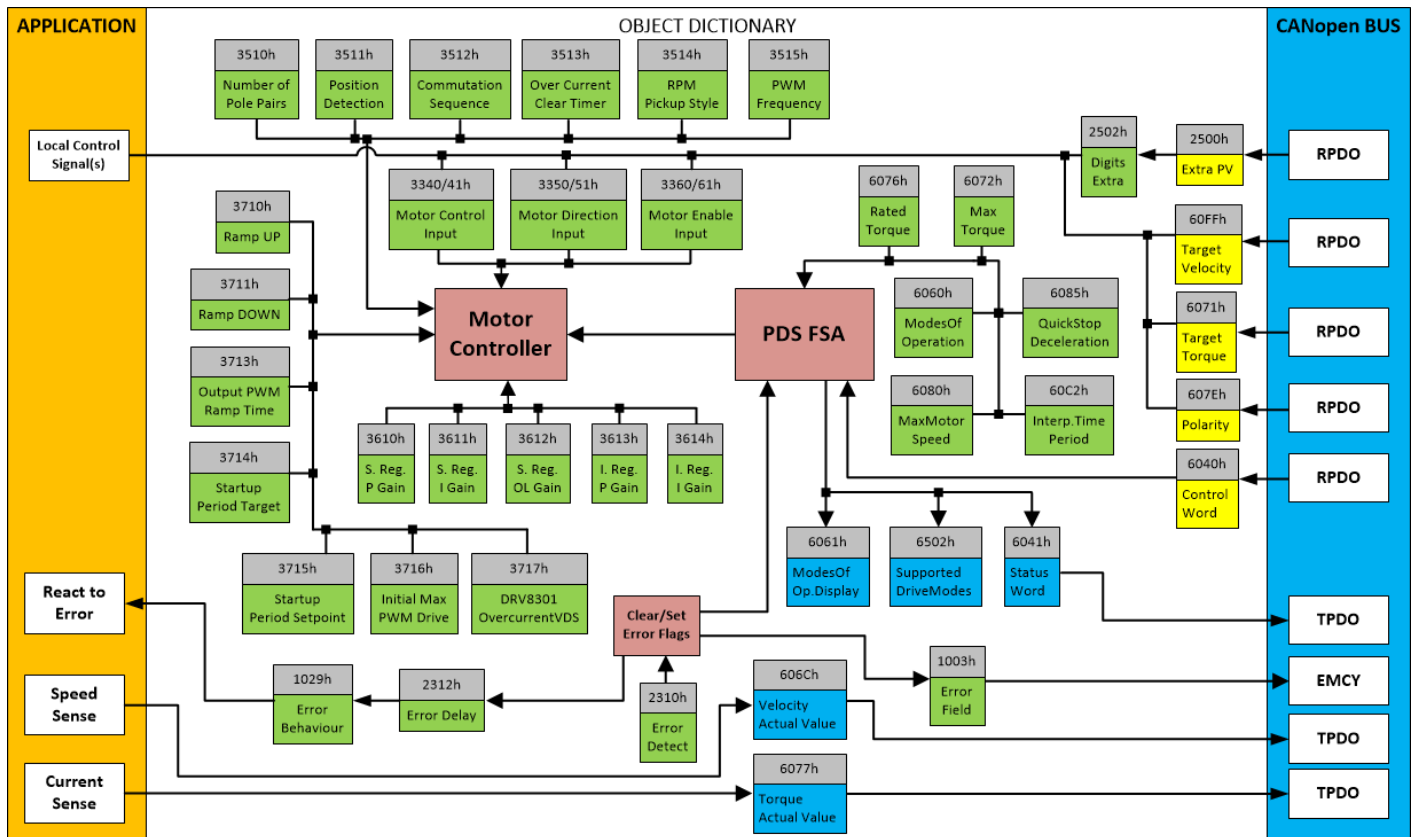


Figure 2 – CANopen PDS FSA and Motor Control Objects

The top-level motor control is handled by the PDS FSA block. It handles the enabling and disabling the motor drive based on the received CANopen messages.

The lower level motor control, including the current (torque) control loop is taken care by the Motor Controller block. This level of control receives the commands from the PDS FSA and works accordingly.

The actual control, direction and enable sources for the Motor Controller block are user configurable. While the master enable signal comes from the PDS FSA, the speed, enable and direction control can be also read from the Universal Inputs of the AX100281.

1.1.1. Motor Control

The objects 3340h **Motor Control Input Source** and 3341h **Motor Control Input Number** select the motor speed (rpm) control source, 3350h **Motor Direction Input Source** and 3351h **Motor Direction Input Number** select the direction signal source and 3360h **Motor Enable Input Source** and 3361h **Motor Enable Input Number** select an optional enable signal. However, it must be noted that the PDS FSA sets the master enable.

The object 3F10h **Number of Pole Pairs** defines the motor pole pair number, this object has impact on the rpm detection. Object 3F11h **Position Detection** sets the rotor position detection type, Hall sensor based or sensorless. Object 3F12h **Commutation Sequence** specifies the commutation sequence to use. CW / CCW sequence is selected using 607Eh **Polarity** (0 == CW, 1 == CCW)

Value	Sequence – CW	Sequence – CCW
0	4 – 6 – 2 – 3 – 1 – 5	3 – 1 – 5 – 4 – 6 – 2
1	6 – 2 – 3 – 1 – 5 – 4	1 – 5 – 4 – 6 – 2 – 3
2	2 – 3 – 1 – 5 – 4 – 6	5 – 4 – 6 – 2 – 3 – 1
3	3 – 1 – 5 – 4 – 6 – 2	4 – 6 – 2 – 3 – 1 – 5
4	1 – 5 – 4 – 6 – 2 – 3	6 – 2 – 3 – 1 – 5 – 4
5	5 – 4 – 6 – 2 – 3 – 1	2 – 3 – 1 – 5 – 4 – 6

Table 1 – Object 3F12h – Commutation Sequence Options

Step	Phase A	Phase B	Phase C
6	PWM	LOW	OFF
2	PWM	OFF	LOW
3	OFF	PWM	LOW
1	LOW	PWM	OFF
5	LOW	OFF	PWM
4	OFF	LOW	PWM

Table 2 – Commutation Sequence Phase Drive States vs Steps (Hall readings)

1.1.2. Initial PDS FSA mode configuration

The PDS FSA needs to be set to active state before the motor can be driven using the Control, Direction and Enable signals. This procedure sets the PDS FSA state to 0x237 which is required for activating the motor driving.

1. Set PDS FSA to state 0x227h by writing object 6040h **PDS FSA Control Word**. First '0x80', then '0x6' and last '0xF'.
2. Set the controller to Operational state using NMT command, this sets the PDS FSA to state 0x237.
3. Then writing RPM value to 60FFh will spin the motor. Note, that the Speed PI is enabled by default (6060h **PDS FSA Modes of Operation** is set to '9'). With DC motor drive, an external speed sensor needs to be configured for the Speed PI to operate correctly.

1.1.3. Sensorless motor control

The sensorless motor control is based on detecting the back emf voltage on the free phase while the motor is running. While this voltage is available only when the motor is running, the startup procedure is carried out without knowing the actual rotor alignment.




Figure 3 - Sensorless drive startup steps

The sensorless startup is carried out in two steps, namely:

1. Ramp-Up

During the ramp-up period, the motor is driven in open loop configuration for picking up speed and for making the back emf signals available for the sensorless control. The speed of the ramp up, together with initial and target commutation speed can be configured using setpoints 3713h **Startup ramp acceleration**, 3714h **Final startup ramp step length** and 3715h **Initial startup ramp step length**. The 3715h **Initial startup ramp step length** defines the commutation interval in the start of the ramp up phase. The 3714h **Final startup ramp step length** defines the commutation interval in the end of the ramp up phase. The unit value for these setpoints depends on the selected PWM frequency for the motor output. The 3713h **Startup ramp acceleration** defines the delay for decrementing the ramp by one (i.e. commutation is speeded up).

The ramp-up phase duration is determined by the following formula, in which 10kHz is the default execution speed (i.e. motor driving pwm frequency) of the low-level commutation algorithm (object 3F15h **PWM Frequency**).

$$t_{ramp-up} = \frac{((Initial\ st.\ up\ ramp\ step\ length - Final\ st.\ up\ ramp\ step\ length) * St.\ up\ ramp\ acceleration)}{10kHz}$$

2. Normal Operation

After the ramp-up is done, the rotor is rotating. At this point the controller switches over to normal operation in which the rotor position is picked up by the back emf algorithm and the PWM drive signals are applied accordingly. In this mode the motor driving signals' PWM duty cycle is determined by the Speed and/or Current controller, as configured.

1.2. Input Function Blocks

1.2.1. Analog Input Modes

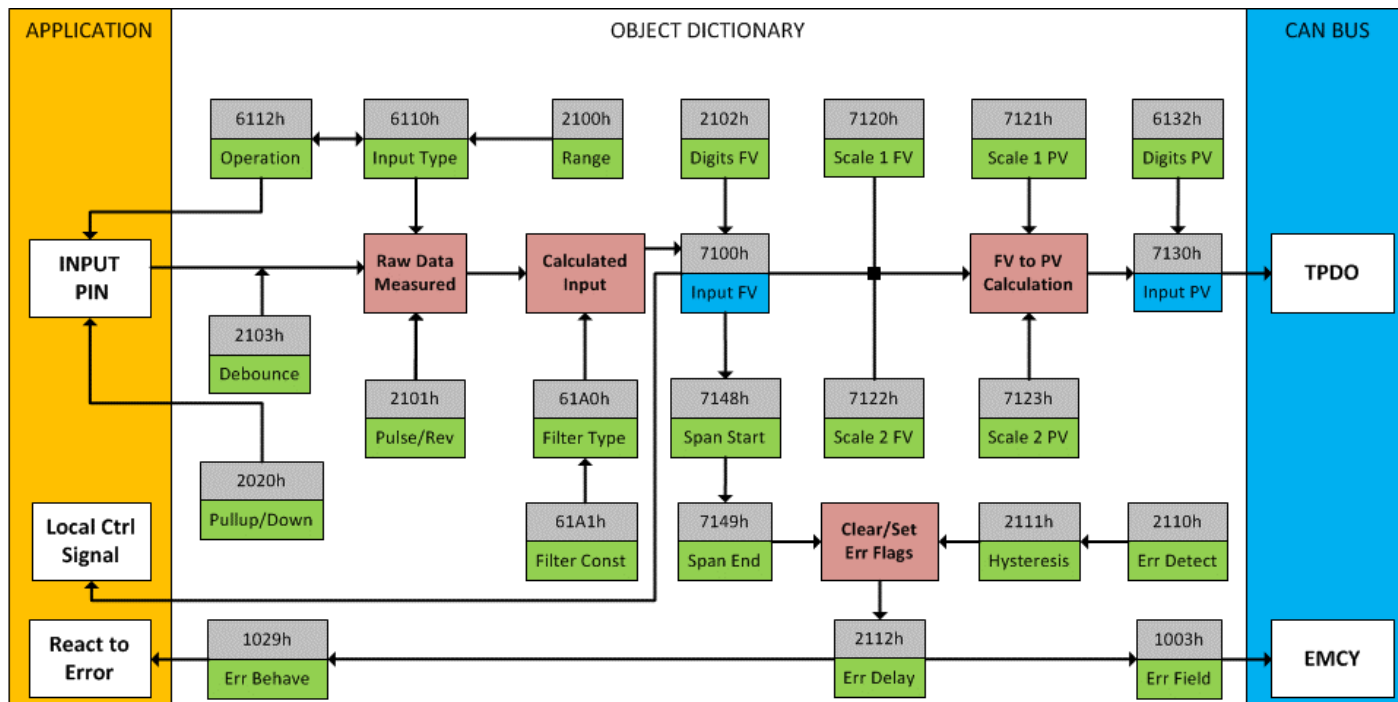


Figure 4 – Analog Input Objects

Object 6112h **AI Operating Mode** determines whether the AI or DI block is associated with an input. The options for object 6112h are shown in Table 3. No values other than what are shown here will be accepted. Note that mode ‘10’ covers only Digital On/Off input, other digital input modes (frequency, pwm, sent, encoder) are read in using mode ‘20’.

Value	Meaning
0	Channel Off
1	Normal Operation (analog)
10	Digital Input (on/off)
20	Analog and On/Off

Table 3 – Object 6112h - AI Operating Mode Options

The most important object associate with the AI function block is object 6110h **AI Sensor Type**. By changing this value, and associated with its object 2100h **AI Input Range**, other objects will be automatically updated by the controller. The options for object 6110h are shown in Table 4, and no values other than what are shown here will be accepted. The inputs are setup to measure voltage by default.

Value	Meaning
40	Voltage Input
50	Current Input
60	Frequency Input (or RPM)
10000	PWM Input

Table 4 – Object 6110h - AI Sensor Type Options

The allowable ranges will depend on the input sensor type selected. Table 5 shows the relationship between the sensor type, and the associated range options. The default value for each range is bolded, and object 2100h **AI Range** will automatically be updated with this value when 6110h is changed. The grayed cells mean that the associate value is not allowed for the range object when that sensor type has been selected.

Value	Voltage	Current	Frequency	PWM
0	0 to 5V	0 to 20mA	0.5Hz to 50Hz	Low Freq (<1kHz)
1	0 to 10V	4 to 20mA	10Hz to 1kHz	High Freq (>100Hz)
2			100Hz to 10kHz	

Table 5 – AI Input Range Options Depending on Sensor Type

Objects 2020h **DI Pull-up/Pull-down Mode** and 2101h **AI Number of Pulses per Revolution** are used with frequency and PWM sensor types.

Object 2020h **DI Pull-up/Pull-down Mode** will determine the configuration of the internal Pull-up/Pull-down resistors. The options for object 2020h are shown in Table 11, with the default bolded.

0	<i>Pullup/down Off</i>
1	<i>10 kΩ Pullup</i>
2	<i>10 kΩ Pulldown</i>

Table 6 – Pullup/Pulldown Resistor Options

Object 2103h Debounce Time supports the options listed in Table 7. These options are used only for the input types that are based on signal edge detection (frequency, pwm and encoder modes).

0	<i>None</i>
1	<i>111ns</i>
2	<i>1.78us</i>
3	<i>14.22us</i>

Table 7 – Debounce Time Options

Frequency measurement can be changed to RPM, by setting object 2101h **AI Number of Pulses per Revolution** to a non-zero value.

All inputs can be further filtered once the raw data has been measured. Object 61A0h **AI Filter Type** determines what kind of filter is used per Table 8. By default, additional software filtering is disabled.

Value	Meaning
0	No Filter
1	Moving Average
2	Repeating Average

Table 8 – Object 61A0h - AI Filter Type Options

Object 61A1h **AI Filter Constant** is used with all three types of filters as per the formulas below:

Calculation with no filter:

Value = Input

The data is simply a ‘snapshot’ of the latest value measured by the ADC or timer.

Equation 1 - Moving Average Transfer Function:

$$\text{Value}_N = \text{Value}_{N-1} + \frac{(\text{Input} - \text{Value}_{N-1})}{\text{Filter Constant}}$$

This filter is called every 1ms. The value Filter Constant stored in object 61A1h is ‘1’ by default.

Equation 2 - Repeating Average Transfer Function:

$$\text{Value} = \frac{\sum_0^N \text{Input}_N}{N}$$

At every reading of the input value, it is added to the sum. At every Nth read, the sum is divided by N, and the result is the new input value. The value and counter will be set to zero for the next read. The value of N is stored in object 61A1h and is ‘1’ by default. This filter is called every 1ms.

The value from the filter is shifted according to read-only object 2102h **AI Decimal Digits FV** and then written to read-only object 7100h **AI Input Field Value**.

It is the **AI Input FV** which is used by the application for error detection, and as a control signal for other logic blocks and/or motor control. Object 7100h is mappable to a TPDO and is mapped to TPDO1 by default.

Read-only object 7130h **AI Input Process Value** is also mappable. However, the default values for objects 7121h **AI Scaling 1 PV** and 7123h **AI Scaling 2 PV** are set to equal 7120h and 7122h respectively, while object 6132h **AI Decimal Digits PV** is automatically initialize to equal 2102h. This means that the default relationship between the FV and PV is one-to-one, so object 7130h is not mapped to a TPDO by default.

Should a different linear relationship between what is measured versus what is sent to the CANopen bus be desired, objects 6132h, 7121h and 7123h can be changed. The linear relationship profile is shown in Figure 7 below.

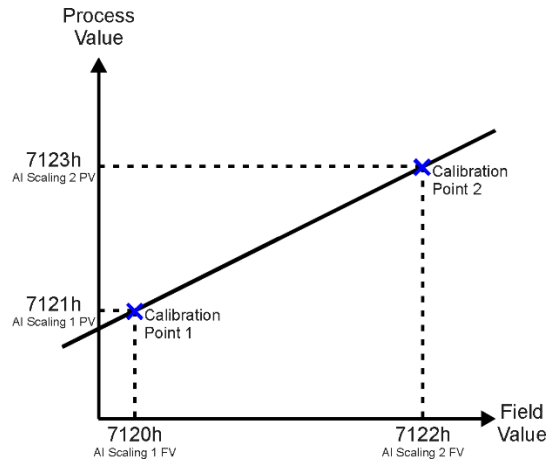


Figure 5 – Analog Input Linear Scaling FV to PV

As stated earlier, the FV scaling objects are automatically updated with the Sensor Type or Range changes. This is because objects 7120h and 7122h are not only used in a linear conversion from FV to PV as described above, but also as the minimum and maximum limits when the input is used to control another logic block. Therefore, the values in these objects are important, even when the AI Input PV object is not being used.

The AI Span Start and AI Span End objects are used for fault detection, so they too are automatically updated for sensible values as the Type/Range changes. The Error Clear Hysteresis object is also updated, as it too is measured in the same unit as the AI Input FV object.

Table 9 lists the default values that are loaded into objects 7120h, 7122h, 7148h, 7149h, and 2111h for each Sensor Type and Pulses per Rev combination. Recall that these objects all have the decimal digits applied to them as outlined in Table 10.

Sensor Type/ Input Range	7148h AI Span Start (i.e. Error Min)	7120h AI Scaling 1 FV (i.e. Input Min)	7122h AI Scaling 2 FV (i.e. Input Max)	7149h AI Span End (i.e. Error Max)	2111h Error Clear Hysteresis
Voltage: 0 to 5V	200 [mV]	500 [mV]	4500 [mV]	4800 [mV]	100 [mV]
Voltage: 0 to 10V	200 [mV]	500 [mV]	9500 [mV]	9800 [mV]	200 [mV]
Current: 0 to 20mA	0 [uA]	0 [uA]	20000 [uA]	20000 [uA]	250 [uA]
Current: 4 to 20mA	1000 [uA]	4000 [uA]	20000 [uA]	21000 [uA]	250 [uA]
Freq: 0.5Hz to 50Hz	100 [0.01Hz]	500 [0.01Hz]	5000 [0.01Hz]	5500 [0.01Hz]	20 [0.01Hz]
Freq: 10Hz to 1kHz	50 [0.1Hz]	100 [0.1Hz]	10000 [0.1Hz]	11000 [0.1Hz]	50 [0.1Hz]
Freq: 100Hz to 10kHz	50 [Hz]	100 [Hz]	10000 [Hz]	10500 [Hz]	10 [Hz]
Freq: RPM Mode	500 [0.1RPM]	1000 [0.1RPM]	30000 [0.1RPM]	33000 [0.1RPM]	100 [0.1RPM]
PWM: 0 to 100%	10 [0.1%]	50 [0.1%]	950 [0.1%]	990 [0.1%]	10 [0.1%]
Digital Input	OFF	OFF	ON	ON	0

Table 9 – AI Object Defaults Based on Sensor Type and Input Range

When changing these objects, Table 10 outlines the range constraints places on each based on the Sensor Type and Input Range combination selected. In all cases, the MAX value is the upper end of the range. Object 7122h cannot be set higher than MAX, whereas 7149h can be set up to 110% of MAX. Object 2111h on the other hand can only be set up to maximum value of 10% of MAX.

Sensor Type/ Pulses per Rev	7148h	7120h	7122h	7149h	2111h
Voltage: 0 to 5V and 0 to 10V Current: 0 to 20mA and 4 to 20mA RPM: 0 to 6000RPM PWM: 0 to 100%	0 to 7120h	7148h to 7122h	7120h to 7149h If(7149h>MAX) 7120h to MAX	7122h to 110% of MAX	10% of MAX
Current: 4 to 20mA	0 to 7120h	7148h to 7122h If(7148h<4mA) 4mA to 7122h			
Freq: 0.5Hz to 50Hz	0.1Hz to 7120h	7148h to 7122h If(7148h<0.5Hz) 0.5Hz to 7122h			
Freq: 10Hz to 1kHz	5Hz to 7120h	7148h to 7122h If(7148h<10Hz) 10Hz to 7122h			
Freq: 100Hz to 10kHz	50Hz to 7120h	7148h to 7122h If(7148h<100Hz) 100Hz to 7122h			
Voltage: 0 to 5V and 0 to 10V Current: 0 to 20mA and 4 to 20mA RPM: 0 to 6000RPM PWM: 0 to 100%	0 to 7120h	7148h to 7122h			

Table 10 – AI Object Ranges Based on Sensor Type and Input Range

The last objects associated with the analog input block left to discuss are those associated with fault detection. Should the calculated input (after measuring and filtering) fall outside of the allowable range, as defined by the AI Span Start and AI Span End objects, an error flag will be set in the application if and only if object 2110h **AI Error Detect Enabled** is set to TRUE (1).

When (7100h AI Input FV < 7148h AI Span Start), an “Out of Range Low” flag is set. If the flag stays active for the 2112h **AI Error Reaction Delay** time, an Input Overload Emergency (EMCY) message will be added to object 1003h **Pre-Defined Error Field**. Similarly, when (7100h AI Input FV > 7149h AI Span End), an “Out of Range High” flag is set and will create an EMCY message should it stay active throughout the delay period. In either case, the application will react to the EMCY message as defined by object 1029h **Error Behavior** at the sub-index corresponding to an Input Fault.

Once the fault has been detected, the associated flag will be cleared only once the input comes back into range. Object 2111h **AI Error Clear Hysteresis** is used here so that the error flag will not be set/cleared continuously while the AI Input FV hovers around the AI Span Start/End value.

To clear an “Out of Range Low” flag, AI Input FV >= (AI Span Start + AI Error Clear Hysteresis)

To clear an “Out of Range High” flag, AI Input FV <= (AI Span End - AI Error Clear Hysteresis)

Both flags cannot be active at once. Setting either one of these flags automatically clears the other.

1.2.2. Digital Input Modes

The digital input (DI) function block only becomes applicable on the input when object 6112h **AI Operation**, is set to a digital input response (mode '10').

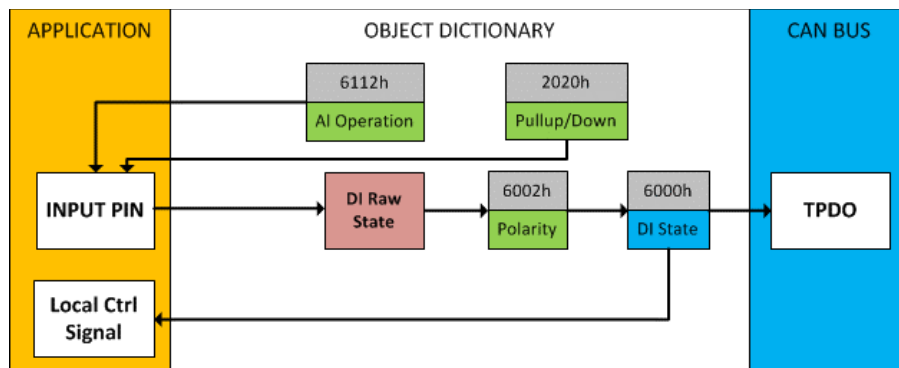


Figure 6 – Digital Input Objects

When object 6112h is set to 10 = *Digital Input*, object 2020h **DI Pull-up/Pull-down Mode** will determine the configuration of the internal Pull-up/Pull-down resistors. The options for object 2020h are shown in Table 11, with the default **bolded**.

Value	Meaning
0	Pullup/Down Disabled (high impedance input)
1	10kΩ Pullup Resistor Enabled
2	10kΩ Pulldown Resistor Enabled

Table 11 – DI Pullup/Down Options

Figure 7 shows the hysteresis on the input when switching a discrete signal. A digital input can be switched up to +Vcc

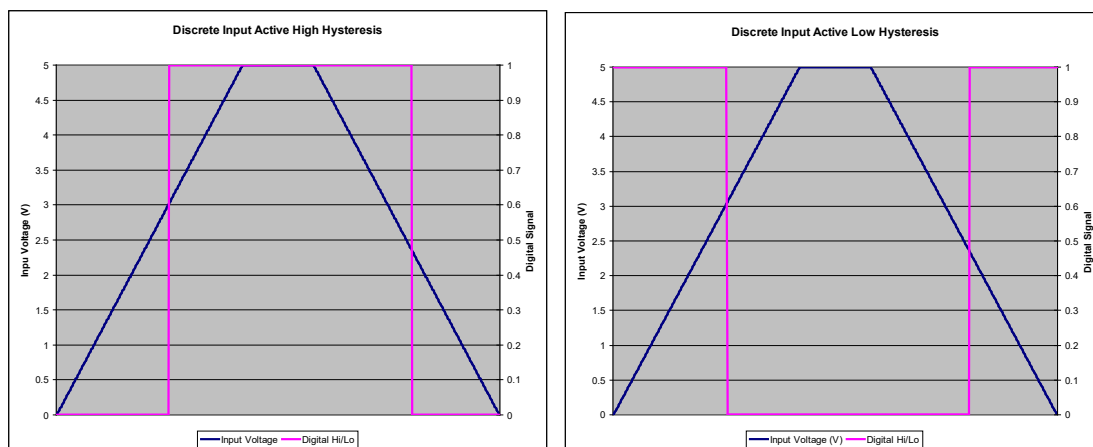


Figure 7 – Discrete Input Hysteresis

Once the raw state has been evaluated, the logical state of the input is determined by object 6002h **DI_Polarity_8_Input_Lines**. The options for object 6002h are shown in Table 12. The state of the DI will be written to read-only object 6000h **DI_Read_state_8_Input_Lines**. By default, normal on/off logic is used.

Value	Meaning
0	Normal On/Off
1	Inverse On/Off

Table 12 – Object 6002h DI Polarity 8 Input Lines Options

The format to write to object 6002h is as follows:

Sub-index 1 will determine the following inputs polarities

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
-	-	-	-	UI4	UI3	UI2	UI1

The rest of the bits in sub-index 1 will be ignored.

As per the format of object 6002h, the bits in object 6000h **DI_Read_state_8_Input_Lines** will be written to represent the same inputs' states.

There is another type of 'digital' input that can be selected when 6112h is set to 20 = Analog On/Off. However, in this case, the input is still configured as an analog input, and therefore the objects from the Analog Input (AI) block are applied instead of those discussed above. Here, objects 2020h, 2030h and 6030h are ignored, and 6000h is written as per the logic shown in Figure 8. In this case, the MIN parameter is set by object 7120h **AI Scaling 1 FV**, and the MAX is set by 7122h **AI Scaling 2 FV**. For all other operating modes, object 6000h will always be zero.

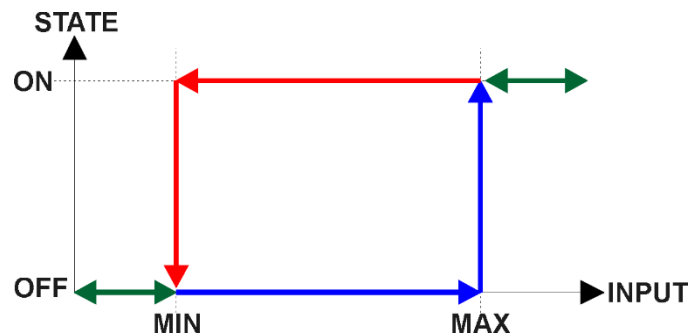


Figure 8 – Analog Input Reads as Digital

1.3. PID Controller Block

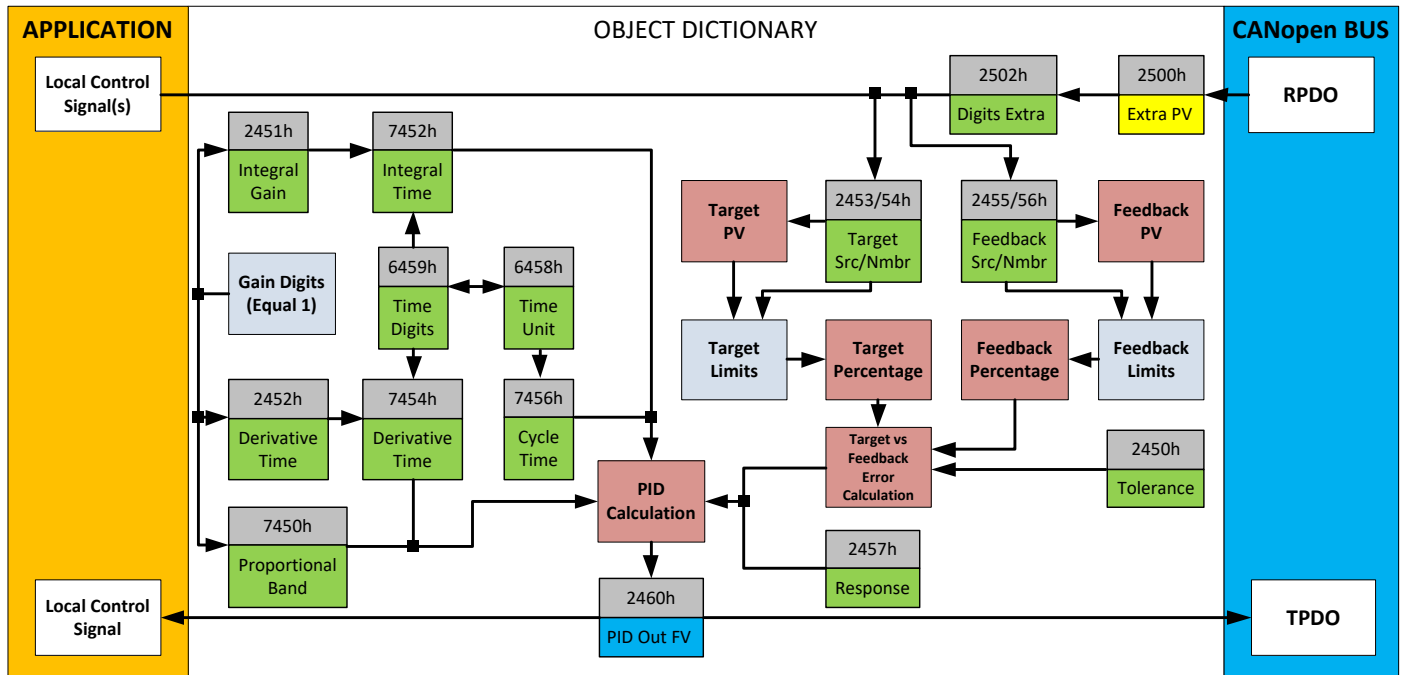


Figure 9 – PID Control Objects

As with the output function block, the PID control function has control inputs associate with it that can be mapped to the output from any other function block. Objects 2453h **PID Target Source** and 2454h **PID Target Number** define what value the PID loop will attempt to maintain. For example, in the case of a setpoint (fixed) control application, this input can be mapped to one of object 5010h, a Constant FV. In this case, since there is no pre-defined range associated with a constant, the scaling limits will be set equal to those of the feedback input. Otherwise, the target input units do not have to match the feedback units, so long as they are scaled relative to one another.

Objects 2355h **PID Feedback Source** and 2356h **PID Feedback Number** define the close-loop input. Both the target and feedback use options listed in **Error! Reference source not found.** as the available options. Both inputs are normalized to a percentage based on the associated scaling limits.

Object 2450h **PID Tolerance** defines the acceptable difference between the target and feedback, as a percentage, whereby an absolute difference smaller than this is treated as a 0% error.

Unless both the target and feedback inputs have legitimate control sources selected, the PID loop is disabled. When active, however, the PID algorithm will be called every 7456h **PID Cycle Time**, the default being every 10ms.

Object 6458h **PID Physical Unit Timing** is a read-only value and is defined in Seconds. The default value for object 6459h **PID Decimal Digits Timing** is 3, which means the object 7456h, along with other PID timing objects, are interpreted in milliseconds. Other time objects associated with the PID control are 7452h **PID Integral Action Time (Ti)** and 7454h **PID Derivative Action Time (Td)**.

None time related objects use a fixed resolution of 1 decimal digit. These objects include 7450h PID Proportional Band (G), 2450h PID Tolerance, 2451h PID Integral Gain (Ki), and 2454h PID Derivative Gain (Kd).

By default, the PID loop is assumed to be controlling a single output which will increase/decrease as the feedback over/undershoots the target. However, some systems may require a push-pull response where one output comes on when over target, and the other when under. Object 2457h PID Control Response allows the user to select the response profile as needed from Table 13.

0	<i>Single Output</i>
1	<i>Dual Slope</i>
2	<i>Setpoint Control</i>
3	<i>On When Over Target</i>
4	<i>On When Below Target</i>

Table 13 – PID Response Options

The PID algorithm used is shown below, with names in red being the object variables. The result $PIDOutput_k$ is written to the read-only mappable object 2460h **PID Output Field Value** and is interpreted as a percentage value with 1 decimal place resolution. It can be used as the control source for another function block, i.e. one of the analog outputs.

The PID algorithm used is shown below, where G , K_i , T_i , K_d , T_d and $Loop_Update_Rate$ are configurable parameters.

$$PIDOutput_k = P_k + I_k + D_k$$

$$P_k = P_Gain * Error_k$$

$$I_k = I_Gain * ErrorSum_k$$

$$D_k = D_Gain * (Error_k - Error_{k-1})$$

$$Error_k = Target - Feedback$$

$$ErrorSum_k = ErrorSum_{k-1} + Error_k$$

$$P_Gain = G$$

$$I_Gain = K_i * T / T_i$$

$$D_Gain = K_d * T / T_d$$

$$T = Loop_Update_Rate * 0.001$$

Note on the above equations: in case T_i and/or T_d is set to zero, it is internally saturated to 0.00001. In case I_Gain and/or D_Gain need to be configured as zero gain, please set K_i and/or K_d to zero instead of T_i/T_d .

Each system will have to be tuned for the optimum output response. Response times, overshoots and other variables will have to be decided by the customer using an appropriate PID tuning strategy.

1.4. Diagnostics

There are nine built in CANopen EMCY messages supported. The power supply, the CPU temperature, the out-of-range status of each of the inputs and the status of the gate driver chip are monitored by the firmware.

If any of the variables are out of range or the gate driver / power supply error status bits get set, a corresponding CANopen EMCY is sent.

The EMCY behavior can be tuned using objects 2110h **AI Error Detect Enable**, 2111h **AI Error Clear Hysteresis** and 2112h **AI Error Reaction Delay**.

EMCY Data	Meaning
0x 10 81 01 00 00 00 00 00	Communications error
0x 00 31 01 00 01 00 00 00	VPS out of range
0x 00 42 01 00 02 00 00 00	CPU temperature out of range
0x 10 F0 01 00 40 00 00 00	Univ. Input #1 out of range
0x 10 F0 01 00 41 00 00 00	Univ. Input #2 out of range
0x 10 F0 01 00 42 00 00 00	Univ. Input #3 out of range
0x 10 F0 01 00 43 00 00 00	Univ. Input #4 out of range
0x 02 F0 01 00 60 00 00 00	Controller malfunction
0x 03 F0 01 00 60 00 00 00	Motor driver malfunction

Table 14 – EMCY codes

1.5. Miscellaneous Function Block

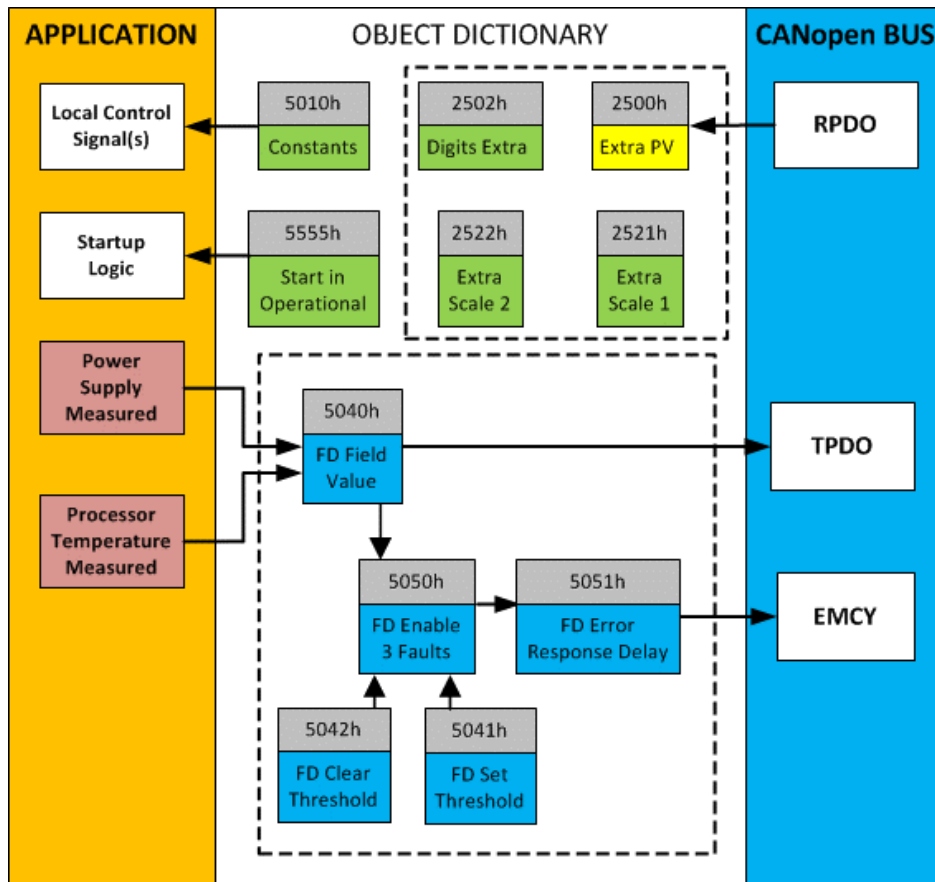


Figure 10 – Miscellaneous Objects

Extra RPDO Messages

Objects 2500h **Extra Control Received PV**, 2502h **EC Decimal Digits PV**, 2502h **EC Scaling 1 PV** and **EC Scaling 2 PV** allow for additional data received on a CANopen® RPDO to be mapped independently to various function blocks as a control source. The scaling objects are provided to define the limits of the data when it is used by another function block, as shown in Figure 5.

Constant Values

Object 5010h **Constant Field Value** is provided to give the user the option for a fixed value that can be used by other function blocks. Sub-index 1 is fixed as FALSE (0) and sub-index 2 is always TRUE (1). There are 13 other sub-indexes provided for user selectable values.

The constants are read as 32-bit real (float) data, so no decimal digit object is provided. When setting up the constant, make sure to do it with the resolution of the object that will be compared with it.

The False/True constants are provided primarily to be used with the logic block. The variable constants are also useful with the logic or math blocks.

Fault Detection Objects

Object 5040h **FD Field Value** is a read only object containing the field values of the over temperature, over and under voltage. Object 5041h **FD Set Threshold** sets the limit values for which the faults occur when reached. When any of these thresholds are reached, the faults will clear when the values have lowered to values set in object 5042h **FD Clear Threshold**.

For the AX100281 controller to begin monitoring (over temperature, high/low voltage) fault states, object 5050h **Enable 3 Faults** determines which Fault Detection is enabled through 1 byte data as bits. Once a fault is detected, object 5051h **Error Response Delay** will determine how long (in 100ms steps) the fault needs to be present to flag and error.

Startup

The object 5555h **Start in Operational** is provided as a ‘cheat’ when the unit is not intended to work with a CANopen network (i.e. a stand-alone control) or is working on a network comprised solely as slaves so the OPERATION command will never be received from a master. By default, this object is disabled (FALSE).

When using the AX100281 as a stand-alone controller where 5555h is set to TRUE, it is recommended to disable all TPDOs (set the Event Timer to zero) so that it does not run with a continuous CAN error when not connected to a bus.

1.6. Available Control Sources

Many of the Function Blocks have selectable input signals, which are determined with “[Name] Source” and “[Name] Number” objects. Together, these objects uniquely select how the I/O of the various function blocks are linked together. “[Name] Source” object determines the type of the source and “[Name] Number” selects the actual source if there is more than one of the same type. Available “[Name] Source” options and associated “[Name] Number” ranges are listed in

Sources	Number Range	Notes
0: Control Not Used	N/A	When this is selected, it disables all other setpoints associated with the signal in question.
1: Received CAN Message	1 to 11	User must enable the function block, as it is disabled by default.
2: Universal Input Measured	1 to 4	
3: Control Constant Data	1 to 8	1 = FALSE, 2 = TRUE, 3 to 8 = User Selectable
4: Motor RPM Value	1	Measured RPM reading.
5: Motor Current Feedback	1	Measured motor current in Amps.
6: Power Supply Measured	1	Measured power supply value in Volts.
7: Temperature Measured	1	Measured processor temperature in °C.
8: CAN Reception Timeout	1	
9: Additional Control Data	1 to 16	User must enable the function block, as it is disabled by default.
10: PID Function Block	1	User must enable the function block, as it is disabled by default.

Table 15 – Available Control Sources and Numbers

Control Constant Data has no unit nor minimum and maximum values assigned to it, therefore user has to assign appropriate constant values according to intended use.

All sources are available for all blocks. Though input Sources are freely selectable, it must be remembered that not all options would make sense in all cases, and it is up to the user to program the controller in a logical and functional manner.

Control Source	Scaling 1	Scaling 2	Dec Digits
CANopen Message – Num 1 to 11	2520h	2522h	2502h
Constant Function Block	N/A	N/A	N/A (float)
PID Control Function Block	0%	100%	1 (fixed)
Power Supply Measured	N/A	N/A	1 (fixed)
Processor Temperature Measured	N/A	N/A	1 (fixed)

Table 16 – Scaling Limits per Control Source

2. INSTALLATION INSTRUCTIONS

2.1. Dimensions and Pinout


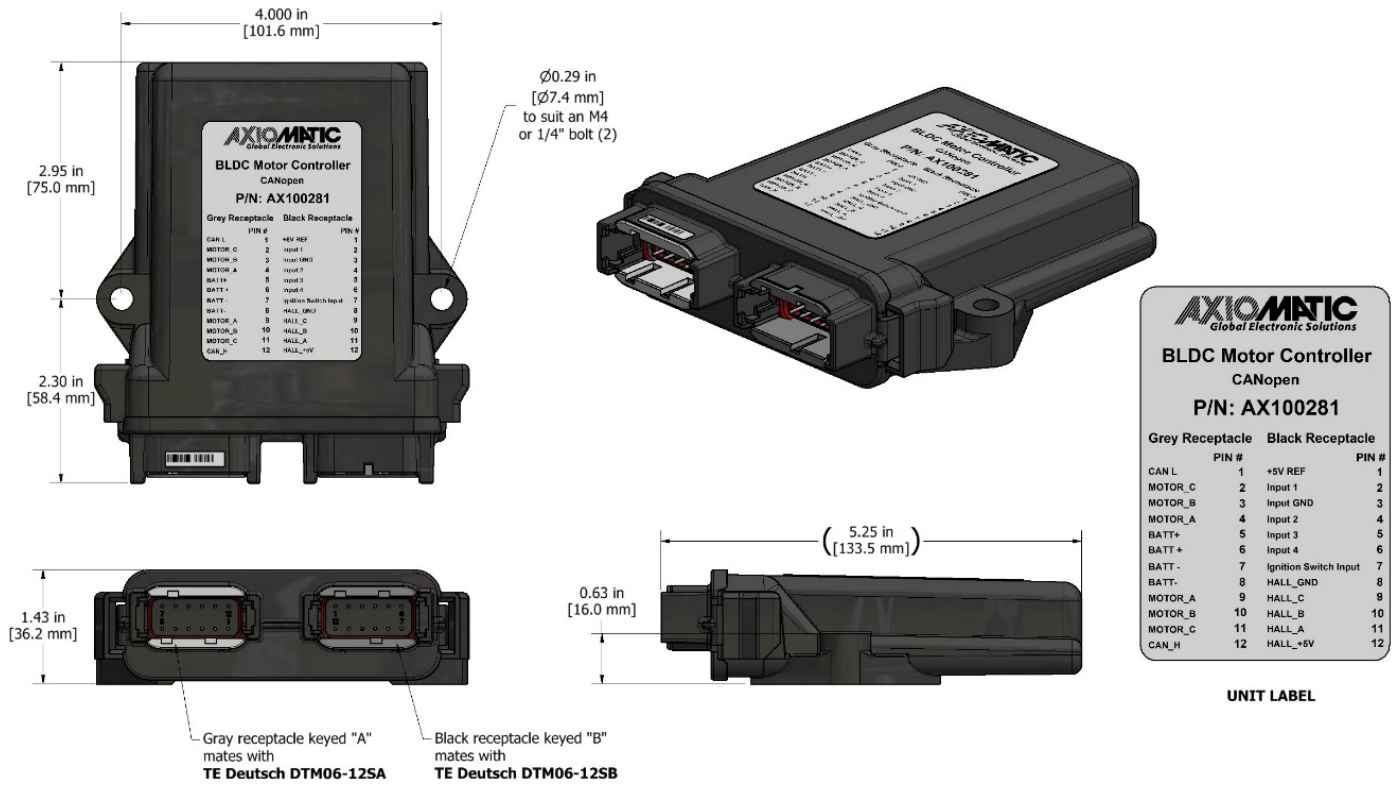


Figure 11 – AX100281 Dimensional Drawing

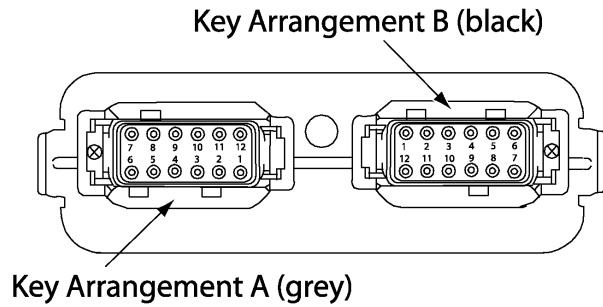

FRONT VIEW 24 PIN RECEPTACLE

Grey Connector		Black Connector	
Pin	Function	Pin	Function
1	CAN Low	1	+5 V Reference
2	Motor C	2	Input 1
3	Motor B	3	Input Ground
4	Motor A	4	Input 2
5	Battery +	5	Input 3
6	Battery +	6	Input 4
7	Battery -	7	Ignition Switch Input
8	Battery -	8	Hall Sensor Ground
9	Motor A	9	Hall Sensor C
10	Motor B	10	Hall Sensor B
11	Motor C	11	Hall Sensor A
12	CAN High	12	Hall Sensor +5 V

Table 17 – AX100281 Connector Pinout

3. CANOPEN INTERFACE AND OBJECT DICTIONARY

The CANopen® object dictionary of the AX100281 Controller is based on CiA device profile DS-402 V4.1.0 (drives and motion control device profile). The object dictionary includes Communication Objects beyond the minimum requirements in the profile, as well as several manufacturer-specific objects for extended functionality.

3.1. Node ID and Baud rate

By default, the AX100281 controller ships factory programmed with a

Node ID = 127 (0x7F)

and with

Baud rate = 250 kbps.

3.1.1. LSS Protocol to Update

The only means by which the Node-ID and Baud rate can be changed is to use Layer Settling Services (LSS) and protocols as defined by CANopen® standard DS-305.

Follow the steps below to configure either variable using LSS protocol. If required, please refer to the standard for more detailed information about how to use the protocol

3.1.1.1. Setting Node-ID

- Set the module state to LSS-configuration by **sending** the following message:

<i>Item</i>	<i>Value</i>
COB-ID	0x7E5
Length	2
Data 0	0x04 (cs=4 for switch state global)
Data 1	0x01 (switches to configuration state)

- Set the Node-ID by **sending** the following message:

<i>Item</i>	<i>Value</i>
COB-ID	0x7E5
Length	2
Data 0	0x11 (cs=17 for configure node-id)
Data 1	Node-ID (set new Node-ID as a hexadecimal number)

- The module will send the following response (any other response is a failure).

<i>Item</i>	<i>Value</i>
COB-ID	0x7E4
Length	3
Data 0	0x11 (cs=17 for configure node-id)
Data 1	0x00
Data 2	0x00

- Save the configuration by **sending** the following message:

<i>Item</i>	<i>Value</i>
COB-ID	0x7E5
Length	1
Data 0	0x17 (cs=23 for store configuration)

- The module will send the following response (any other response is a failure)

<i>Item</i>	<i>Value</i>
COB-ID	0x7E4
Length	3
Data 0	0x17 (cs=23 for store configuration)
Data 1	0x00
Data 2	0x00

- Set the module state to LSS-operation by **sending** the following message: (Note, the module will reset itself back to the pre-operational state)

<i>Item</i>	<i>Value</i>
COB-ID	0x7E5
Length	2
Data 0	0x04 (cs=4 for switch state global)
Data 1	0x00 (switches to waiting state)

3.1.1.2. Setting Baud rate

- Set the module state to LSS-configuration by sending the following message:

<i>Item</i>	<i>Value</i>
COB-ID	0x7E5
Length	2
Data 0	0x04 (cs=4 for switch state global)
Data 1	0x01 (switches to configuration state)

- Set the baud rate by sending the following message:

<i>Item</i>	<i>Value</i>
COB-ID	0x7E5
Length	3
Data 0	0x13 (cs=19 for configure bit timing parameters)
Data 1	0x00 (switches to waiting state)
Data 2	Index (select baudrate index per Table 32)

<i>Index</i>	<i>Bit Rate</i>
0	1 Mbit/s
1	800 kbit/s
2	500 kbit/s
3	250 kbit/s
4	125 kbit/s (default)
5	reserved (100 kbit/s)
6	50 kbit/s
7	20 kbit/s
8	10 kbit/s

Table 18 – LSS Baud rate Indices

- The module will send the following response (any other response is a failure):

<i>Item</i>	<i>Value</i>
COB-ID	0x7E4
Length	3
Data 0	0x13 (cs=19 for configure bit timing parameters)
Data 1	0x00
Data 2	0x00

- Activate bit timing parameters by sending the following message:

<i>Item</i>	<i>Value</i>
COB-ID	0x7E5
Length	3
Data 0	0x15 (cs=19 for activate bit timing parameters)
Data 1	<delay_lsb>
Data 2	<delay_msb>

The delay individually defines the duration of the two periods of time to wait until the bit timing parameters switch is done (first period) and before transmitting any CAN message with the new bit timing parameters after performing the switch (second period). The time unit of switch delay is 1 ms.

- Save the configuration by sending the following message (on the NEW baud rate):

<i>Item</i>	<i>Value</i>
COB-ID	0x7E5
Length	1
Data 0	0x17 (cs=23 for store configuration)

- The module will send the following response (any other response is a failure):

Item	Value
COB-ID	0x7E4
Length	3
Data 0	0x17 (cs=23 for store configuration)
Data 1	0x00
Data 2	0x00

- Set the module state to LSS-operation by sending the following message: (Note, the module will reset itself back to the pre-operational state)

Item	Value
COB-ID	0x7E5
Length	2
Data 0	0x04 (cs=4 for switch state global)
Data 1	0x00 (switches to waiting state)

The following screen capture (left) shows the CAN data was sent (7E5h) and received (7E4h) by the tool when the baud rate was changed to 250 kbps using the LSS protocol. The other image (right) shows what was printed on an example debug RS-232 menu while the operation took place.

Between CAN Frame 98 and 99, the baud rate on the CAN Scope tool was changed from 125 to 250 kbps.

The left screenshot shows the CAN Scope interface. The 'Add/Delete ID Area' section has 'from' and 'to' fields set to '0x000 <> 0x7FF'. The 'Baud rate' dropdown is set to '250'. The frame table below shows frames 95 through 102. Frame 98 is the last frame at 125 kbps, and frame 99 is the first frame at 250 kbps.

Fram...	Absolute Time	RelTime	Id	Atr	L	d1	d2	d3	d4
95	11:42:45.248	6110	07E5		2	04	01		
96	11:42:54.468	9219	07E5		3	13	00	03	
97	11:42:54.468	0	07E4		3	13	00	00	
98	11:42:58.687	4218	07E5		3	15	88	13	
99	11:43:16.579	17891	07E5		1	17			
100	11:43:16.907	328	07E4		3	17	00	00	
101	11:43:23.017	6109	07E5		2	04	00		
102	11:43:23.017	0	0750		1	00			

The right screenshot shows a debug RS-232 menu with the following text:

```

===== Main Menu =====
Choose one of the following:
U: View Object Dictionary
D: Default Object Dictionary
T: Toggle RS-232 Stream On/Off
S: Show/Stop Diagnostics
L: Load New Software
M: Main Menu (this)

->Node Id = 80
->Baudrate= 125 [kbps]
CO: PRE-OPERATIONAL
Activating new baud = 250 [kbps]
CO: STOP
Restarting CAN in 5000 [ms]
CO: PRE-OPERATIONAL
Storing ID
Storing Factory Parameters

Storing Baud
Storing Factory Parameters

Storing Communication Parameters

->Node Id = 80
->Baudrate= 250 [kbps]
CO: PRE-OPERATIONAL

```

3.2. Communication Objects (DS-301)

Index (hex)	Object	Object Type	Data Type	Access	PDO Mapping
1000	Device Type	VAR	UNSIGNED32	RO	No
1001	Error Register	VAR	UNSIGNED8	RO	No
1002	Manufacturer Status Register	VAR	UNSIGNED32	RO	No
1003	Pre-Defined Error Field	ARRAY	UNSIGNED32	RO	No
1010	Store Parameters	ARRAY	UNSIGNED32	RW	No
1011	Restore Default Parameters	ARRAY	UNSIGNED32	RW	No
1016	Consumer Heartbeat Time	ARRAY	UNSIGNED32	RW	No
1017	Producer Heartbeat Time	VAR	UNSIGNED16	RW	No
1018	Identity Object	RECORD		RO	No
1020	Verify Configuration	ARRAY	UNSIGNED32	RO	No
1029	Error Behavior	ARRAY	UNSIGNED8	RW	No
1400	RPDO1 Communication Parameter	RECORD		RW	No
1401	RPDO2 Communication Parameter	RECORD		RW	No
1402	RPDO3 Communication Parameter	RECORD		RW	No
1403	RPDO4 Communication Parameter	RECORD		RW	No
1600	RPDO1 Mapping Parameter	RECORD		RO	No
1601	RPDO2 Mapping Parameter	RECORD		RO	No
1602	RPDO3 Mapping Parameter	RECORD		RO	No
1603	RPDO4 Mapping Parameter	RECORD		RO	No
1800	TPDO1 Communication Parameter	RECORD		RW	No
1801	TPDO2 Communication Parameter	RECORD		RW	No
1802	TPDO3 Communication Parameter	RECORD		RW	No
1803	TPDO4 Communication Parameter	RECORD		RW	No
1A00	TPDO1 Mapping Parameter	RECORD		RW	No
1A01	TPDO2 Mapping Parameter	RECORD		RW	No
1A02	TPDO3 Mapping Parameter	RECORD		RW	No
1A03	TPDO4 Mapping Parameter	RECORD		RW	No

3.2.1. 1000h Device Type

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1000	0	UINT32	RO	No	0x192	0x192	DS-402

3.2.2. 1001h Error Register

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1001	0	UINT8	RO	No	0, 1	0	Error register

3.2.3. 1002h Manufacturer Status Object

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1002	0	UINT32	RO	No	UINT32	0	Manufacturer debug information

3.2.4. 1003h Pre-Defined Error Field

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description	
1003	0	UINT8	RW	No	15	15	Number of subindexes / reset error codes	
	1	UINT32	RO		UINT32	0		EMCY error code #1
	2							EMCY error code #2
	3							EMCY error code #3
	4							EMCY error code #4
	5							EMCY error code #5
	6							EMCY error code #6
	7							EMCY error code #7
	8							EMCY error code #8
	9							EMCY error code #9
	10							EMCY error code #10
	11							EMCY error code #11
	12							EMCY error code #12
	13							EMCY error code #13
	14							EMCY error code #14
15	EMCY error code #15							

3.2.5. 1010h Store Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description	
1010	0	UINT8	RO	No	4	4	Number of subindexes	
	1	UINT32	RW			save	1	Write 0x65766173 ('e', 'v', 'a', 's') for storing ALL parameters
	2							Write 0x65766173 ('e', 'v', 'a', 's') for storing Communication parameters
	3							Write 0x65766173 ('e', 'v', 'a', 's') for storing Application parameters
4	Write 0x65766173 ('e', 'v', 'a', 's') for storing Manufacturer parameters							

3.2.6. 1011h Restore Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description	
1011	0	UINT8	RO	No	4	4	Number of subindexes	
	1	UINT32	RW			load	1	Write 0x4616F6C ('d', 'a', 'o', 'l') for restoring ALL parameters
	2							Write 0x4616F6C ('d', 'a', 'o', 'l') for restoring Communication parameters
	3							Write 0x4616F6C ('d', 'a', 'o', 'l') for restoring Application parameters
	4							Write 0x4616F6C ('d', 'a', 'o', 'l') for restoring Manufacturer parameters

3.2.7. 1016h Consumer Heartbeat Time

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description	
1016	0	UINT8	RO	No	4	4	Number of subindexes	
	1	UINT32	RW				0	Consumer heartbeat time bits 31-24: reserved bits 23-16: Node ID bits 15-0: heartbeat time in milliseconds
	2							
	3							
	4							

3.2.8. 1017h Producer Heartbeat Time

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1017	0	UINT16	RW	No	10-65000	0	Producer heartbeat time in milliseconds

3.2.9. 1018h Identity Object

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description	
1018	0	UINT8	RO	No	4	4	Number of subindexes	
	1	UINT32					0x55	Vendor ID (Axiomatic Technologies)
	2						0xAA100281	Product Code
	3							Revision Number
	4							Serial Number

3.2.10. 1020h Verify Configuration

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description	
1020	0	UINT8	RO	No	4	4	Number of subindexes	
	1	UINT32						Configuration date: DD-MM-YYYY
	2							Configuration time: HH-MM

3.2.11. 1029h Error Behavior

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description	
1029	0	UINT8	RO	No	6	4	Number of subindexes	
	1		RW		0-2		1 (no change)	State transition on Comm. fault
	2							State transition on DI fault
	3							State transition on AI fault
	4							State transition on DO fault
	5							State transition on AO fault
	6							State transition on other faults

3.2.12. 1400h RPDO 1 Communication Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1400	0	UINT8	RO	No	4	4	Number of subindexes
	1	UINT32	RW		UINT32	0x4000027F	COB-ID
	2	UINT8			UINT8	0xFF	Transmission type
	3	UINT16			UINT16	0	Inhibit time
	4	UINT8			UINT8	0	Compatibility entry
	5	UINT16			UINT16	0	Event timer

3.2.13. 1401h RPDO 2 Communication Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1401	0	UINT8	RO	No	4	4	Number of subindexes
	1	UINT32	RW		UINT32	0x4000037F	COB-ID
	2	UINT8			UINT8	0xFF	Transmission type
	3	UINT16			UINT16	0	Inhibit time
	4	UINT8			UINT8	0	Compatibility entry
	5	UINT16			UINT16	0	Event timer

3.2.14. 1402h RPDO 3 Communication Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1402	0	UINT8	RO	No	4	4	Number of subindexes
	1	UINT32	RW		UINT32	0xC000047F	COB-ID
	2	UINT8			UINT8	0xFF	Transmission type
	3	UINT16			UINT16	0	Inhibit time
	4	UINT8			UINT8	0	Compatibility entry
	5	UINT16			UINT16	0	Event timer

3.2.15. 1403h RPDO 4 Communication Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1403	0	UINT8	RO	No	4	4	Number of subindexes
	1	UINT32	RW		UINT32	0xC000057F	COB-ID
	2	UINT8			UINT8	0xFF	Transmission type
	3	UINT16			UINT16	0	Inhibit time
	4	UINT8			UINT8	0	Compatibility entry
	5	UINT16			UINT16	0	Event timer

3.2.16. 1600h RPDO 1 Mapping Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1600	0	UINT8	RW	No	0-4	2	Number of subindexes
	1	UINT32			UINT32	0x607E0008	Polarity
	2				0x60FF0020	Target velocity	
	3				0	Not used by default	
	4				0	Not used by default	

3.2.17. 1601h RPDO 2 Mapping Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1601	0	UINT8	RW	No	0-4	4	Number of subindexes
	1	UINT32			UINT32	0x25000110	EC Extra Received PV Value 1
	2				0x25000210	EC Extra Received PV Value 2	
	3				0x25000310	EC Extra Received PV Value 3	
	4				0x25000410	EC Extra Received PV Value 4	

3.2.18. 1602h RPDO 3 Mapping Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1602	0	UINT8	RW	No	0-4	0	Number of subindexes
	1	UINT32			UINT32	0	Not used by default
	2				0	Not used by default	
	3				0	Not used by default	
	4				0	Not used by default	

3.2.19. 1603h RPDO 4 Mapping Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1603	0	UINT8	RW	No	0-4	0	Number of subindexes
	1	UINT32			UINT32	0	Not used by default
	2				0	Not used by default	
	3				0	Not used by default	
	4				0	Not used by default	

3.2.20. 1800h TPDO 1 Communication Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1800	0	UINT8	RO	No	4	4	Number of subindexes
	1	UINT32	RW		UINT32	0x400001FF	COB-ID
	2	UINT8			UINT8	0xFE	Transmission type
	3	UINT16			UINT16	0	Inhibit time
	4	UINT8			UINT8	0	Compatibility entry
	5	UINT16			UINT16	0x64	Event timer

3.2.21. 1801h TPDO 2 Communication Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1801	0	UINT8	RO	No	4	4	Number of subindexes
	1	UINT32	RW		UINT32	0x400002FF	COB-ID
	2	UINT8			UINT8	0xFE	Transmission type
	3	UINT16			UINT16	0	Inhibit time
	4	UINT8			UINT8	0	Compatibility entry
	5	UINT16			UINT16	0x64	Event timer

3.2.22. 1802h TPDO 3 Communication Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1802	0	UINT8	RO	No	4	4	Number of subindexes
	1	UINT32	RW		UINT32	0x400003FF	COB-ID
	2	UINT8			UINT8	0xFE	Transmission type
	3	UINT16			UINT16	0	Inhibit time
	4	UINT8			UINT8	0	Compatibility entry
	5	UINT16			UINT16	0	Event timer

3.2.23. 1803h TPDO 4 Communication Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1803	0	UINT8	RO	No	4	4	Number of subindexes
	1	UINT32	RW		UINT32	0xC00004FF	COB-ID
	2	UINT8			UINT8	0xFE	Transmission type
	3	UINT16			UINT16	0	Inhibit time
	4	UINT8			UINT8	0	Compatibility entry
	5	UINT16			UINT16	0	Event timer

3.2.24. 1A00h TPDO 1 Mapping Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1A00	0	UINT8	RW	No	0-4	4	Number of subindexes
	1	UINT32			UINT32	0x71000110	Universal Input #1 FV
	2					0x71000210	Universal Input #2 FV
	3					0x71000310	Universal Input #3 FV
	4					0x71000410	Universal Input #4 FV

3.2.25. 1A01h TPDO 2 Mapping Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1A01	0	UINT8	RW	No	0-4	2	Number of subindexes
	1	UINT32			UINT32	0x60410010	PDS FSA Status Word
	2					0x606C0020	Velocity Actual Value
	3					0	Not used by default
	4					0	Not used by default

3.2.26. 1A02h TPDO 3 Mapping Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1A02	0	UINT8	RW	No	0-4	2	Number of subindexes
	1	UINT32			UINT32	0x50200020	Processor Temperature Field Value
	2				0x50300020	Power Supply Field Value	
	3				0	Not used by default	
	4				0	Not used by default	

3.2.27. 1A03h TPDO 4 Mapping Parameters

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
1A03	0	UINT8	RW	No	0-4	0	Number of subindexes
	1	UINT32			UINT32	0	Not used by default
	2				0	Not used by default	
	3				0	Not used by default	
	4				0	Not used by default	

3.3. Application Objects (DS-402 Motor Control and DS-404 Inputs & PID)

Index (hex)	Object	Object Type	Data Type	Access	PDO Mapping
6000	DI Read State 8 Input Lines	VAR	UNSIGNED8	RO	Yes
6002	DI Polarity 8 Input Lines	VAR	UNSIGNED8	RW	No
6110	AI Sensor Type	ARRAY	UNSIGNED16	RW	No
6112	AI Operating Mode	ARRAY	UNSIGNED8	RW	No
6132	AI Decimal Digits PV	ARRAY	UNSIGNED8	RW	No
61A0	AI Filter Type	ARRAY	UNSIGNED8	RW	No
61A1	AI Filter Constant	ARRAY	UNSIGNED16	RW	No
7100	AI Input Field Value	ARRAY	INTEGER16	RO	Yes
7120	AI Input Scaling 1 FV	ARRAY	INTEGER16	RW	No
7121	AI Input Scaling 1 PV	ARRAY	INTEGER16	RW	No
7122	AI Input Scaling 2 FV	ARRAY	INTEGER16	RW	No
7123	AI Input Scaling 2 PV	ARRAY	INTEGER16	RW	No
7130	AI Input Process Value	ARRAY	INTEGER16	RO	Yes
7148	AI Input Span Start	ARRAY	INTEGER16	RW	No
7149	AI Input Span End	ARRAY	INTEGER16	RW	No
6040	PDS FSA Control Word #1	VAR	UNSIGNED16	RW	Yes
6041	PDS FSA Status Word #1	VAR	UNSIGNED16	RO	Yes
6060	PDS FSA Modes of Operation #1	VAR	INTEGER8	RW	No
6061	PDS FSA Modes of Operation Display #1	VAR	INTEGER8	RO	No
606C	Velocity Actual Value #1	VAR	INTEGER32	RW	Yes
6071	Target Torque #1	VAR	INTEGER16	RW	Yes
6072	Max Torque #1	VAR	UNSIGNED16	RW	No
6076	Rated Torque #1	VAR	UNSIGNED32	RW	No
6077	Torque Actual Value #1	VAR	UNSIGNED32	RW	Yes
607E	Polarity #1	VAR	UNSIGNED8	RW	Yes
6080	Max Motor Speed #1	VAR	UNSIGNED32	RW	No
6085	Quick Stop Deceleration #1	VAR	UNSIGNED32	RW	No
60C2	Interpolation Time Period #1	ARRAY	UNSIGNED8	RW	No
60FF	Target Velocity #1	VAR	INTEGER32	RW	Yes
6402	PDS FSA Motor Type #1	VAR	UNSIGNED16	RW	No
6502	PDS FSA Supported Drive Modes #1	VAR	UNSIGNED32	RO	No
6458	PID Physical Unit Timing	ARRAY	UNSIGNED32	RO	No
6459	PID Decimal Digits Timing	ARRAY	INTEGER8	RW	No
7450	PID Proportional Band	ARRAY	INTEGER16	RW	No
7452	PID Integral Action Time	ARRAY	INTEGER16	RW	No
7454	PID Derivative Action Time	ARRAY	INTEGER16	RW	No
7456	PID Cycle Time	ARRAY	INTEGER16	RW	No

3.3.1. 6000h DI Read State 8 Input Lines

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6000	0	UINT8	RO	Yes	0x0 ... 0x7F	0	Digital Input state bitmap, one bit per input.

3.3.2. 6002h DI Polarity 8 Input Lines

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6002	0	UINT8	RW	No	0x0 ... 0x7F	0	Digital Input state polarity bitmap, one bit per input.

3.3.3. 6110h AI Sensor Type

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6110	0	UINT8	RO	No	4	4	Number of subindexes
	1...4	UINT16	RW		40,50, 60,100, 10000, 10002, 10003	40	Input #1...#4 sensor type

3.3.4. 6112h AI Operating Mode

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6112	0	UINT8	RO	No	4	4	Number of subindexes
	1...4		RW		0-2, sensor type dependent.	1	Input #1 ... #4 operating mode

3.3.5. 6132h AI Decimal Digits PV

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6132	0	UINT8	RO	No	6	6	Number of subindexes
	1...4		RW		0-3	3	Input #1 ... #4 PV decimal digits

3.3.6. 61A0h AI Filter Type

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
61A0	0	UINT8	RO	No	4	4	Number of subindexes
	1...4		RW		0-2	0	Input #1 ... #4 software filter type

3.3.7. 61A1h AI Filter Constant

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
61A1	0	UINT8	RO	No	4	4	Number of subindexes
	1...4	UINT16	RW		1-1000	1	Input #1 ... #4 software filter constant

3.3.8. 7100h AI Input Field Value

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
7100	0	UINT8	RO	No	6	6	Number of subindexes
	1...4	INT16	RW		INT16	0	Input #1 ... #4 field value

3.3.9. 7120h AI Input Scaling 1 FV

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
7120	0	UINT8	RO	No	6	6	Number of subindexes
	1...4	INT16	RW		INT16	0	Input #1 ... #4 field value scaler 1

3.3.10. 7121h AI Input Scaling 2 FV

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
7121	0	UINT8	RO	No	6	6	Number of subindexes
	1...4	INT16	RW		INT16	0	Input #1 ... #4 field value scaler 2

3.3.11. 7122h AI Input Scaling 1 PV

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
7122	0	UINT8	RO	No	6	6	Number of subindexes
	1...4	INT16	RW		INT16	0	Input #1 ... #4 process value scaler 1

3.3.12. 7123h AI Input Scaling 2 PV

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
7123	0	UINT8	RO	No	6	6	Number of subindexes
	1...4	INT16	RW		INT16	0	Input #1 ... #4 process value scaler 2

3.3.13. 7130h AI Input Process Value

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
7130	0	UINT8	RO	No	6	6	Number of subindexes
	1...4	INT16	RW		Yes	INT16	0

3.3.14. 7148h AI Input Span Start

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
7148	0	UINT8	RO	No	4	4	Number of subindexes
	1...4	INT16	RW		Input type dependent	200	Input #1 ... #4 span start

3.3.15. 7149h AI Input Span End

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
7149	0	UINT8	RO	No	4	4	Number of subindexes
	1...4	INT16	RW		Input type dependent	4800	Input #1 ... #4 span end

3.3.16. 6040h PDS FSA Control Word

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6040	0	UINT16	RW	Yes	0x0 ... 0xFFFF	0	PDS FSA Control Word

3.3.17. 6041h PDS FSA Status Word

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6041	0	UINT16	RO	Yes	0x0 ... 0xFFFF	0	PDS FSA Status Word

3.3.18. 6060h PDS FSA Modes of Operation

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6060	0	INT8	RW	No	-1, 9, 10	9	PDS FSA Modes of Operation -1 = No speed control, no current control 9 = Speed Control 10 = Speed & Current control

3.3.19. 6061h PDS FSA Modes of Operation Display

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6061	0	INT8	RO	No	INT8	9	PDS FSA Modes of Operation Display

3.3.20. 6402h PDS FSA Motor Type

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6402	0	UINT16	RW	No	UINT16	13	PDS FSA Motor type

3.3.21. 6502h PDS FSA Supported Drive Modes

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6502	0	UINT32	RO	No	UINT32	0x300	PDS FSA Supported drive modes

3.3.22. 60FFh Target Velocity

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
60FF	0	INT32	RW	Yes	0-20000	4000	Target velocity (rotor speed) in rpm

3.3.23. 6080h Max Motor Speed

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6080	0	UINT32	RW	No	0-20000	4000	Maximum rotor speed in rpm.

3.3.24. 6085h Quick Stop Deceleration

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6085	0	UINT32	RW	No	0,1	0	Quick stop deceleration action: 0 – ramp down 1 – abrupt stop

3.3.25. 607Eh Polarity

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
607E	0	UINT8	RW	Yes	0,1	0	Polarity (direction of rotation) 0 – CW 1 – CCW

3.3.26. 60C2h Interpolation Time Period

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
60C2	0	UINT8	RO	No	2	2	Number of subindexes
	1		RW		UINT8	1	
	2					253	

3.3.27. 606Ch Velocity Actual Value

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
606C	0	INT32	RO	Yes	INT32	0	Velocity (rotor speed) in rpm. Please note that the rpm depends on the Speed and Current loop gain parameters. The default configuration is just an example and needs to be updated depending on the application in question. Axiomatic is not responsible for tuning the control loop gains.

3.3.28. 6071h Target Torque

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6071	0	INT16	RW	Yes	0-12000	6000	Target motor torque in milliamps (mA)

3.3.29. 6072h Max Torque

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6072	0	UINT16	RW	No	0-12000	12000	Max motor torque in milliamps (mA). Maximum value outputted by the controller.

3.3.30. 6076h Rated Torque

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6076	0	UINT32	RW	No	0-12000	6000	Rated motor torque in milliamps (mA). Maximum value handled by the motor.

3.3.31. 6077h Actual Torque

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6077	0	UINT32	RO	Yes	UINT32	0	Measured motor current in milliamps (mA)

3.3.32. 7450h PID Proportional Band

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
7450	0	UINT8	RO	No	2	2	Number of subindexes
	1	INT16	RW		0-100	5	Additional PID #1 controller P gain

3.3.33. 7452h PID Integral Action Time

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
7452	0	UINT8	RO	No	2	2	Number of subindexes
	1	INT16	RW		0-1000	5	Additional PID #1 controller integral action time

3.3.34. 7454h PID Derivative Action Time

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
7454	0	UINT8	RO	No	2	2	Number of subindexes
	1	INT16	RW		0-1000	1	Additional PID #1 controller derivative action time

3.3.35. 7456h PID Cycle Time

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
7456	0	UINT8	RO	No	2	2	Number of subindexes
	1	INT16	RW		0-1000	10	Additional PID #1 controller cycle time

3.3.36. 6458h PID Physical Unit Timing

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6458	0	UINT8	RO	No	2	2	Number of subindexes
	1	UINT32			12288	12288	Additional PID #1 controller physical unit timing

3.3.37. 6459h PID Decimal Digits Timing

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
6459	0	UINT8	RO	No	2	2	Number of subindexes
	1		RW		0-4	3	Additional PID #1 controller decimal digits timing

3.4. Manufacturer Objects

<i>Index (hex)</i>	<i>Object</i>	<i>Object Type</i>	<i>Data Type</i>	<i>Access</i>	<i>PDO Mapping</i>
2020	DI Pull Up Down Mode 1 Input Line	ARRAY	UNSIGNED8	RW	No
2100	AI Input Range	ARRAY	UNSIGNED8	RW	No
2101	AI Pulses Per Revolution	ARRAY	UNSIGNED8	RW	No
2102	AI Decimal Digits FV	ARRAY	UNSIGNED8	RW	No
2103	AI Debounce Filter	ARRAY	UNSIGNED8	RW	No
2110	AI Error Detect Enable	ARRAY	BOOLEAN	RW	No
2111	AI Error Clear Hysteresis	ARRAY	INTEGER16	RW	No
2112	AI Error Reaction Delay	ARRAY	UNSIGNED16	RW	No
3340	Motor Control Input Source	VAR	UNSIGNED8	RW	No
3341	Motor Control Input Number	VAR	UNSIGNED8	RW	No
3350	Motor Direction Input Source	VAR	UNSIGNED8	RW	No
3351	Motor Direction Input Number	VAR	UNSIGNED8	RW	No
3352	Motor Direction Input Mode	VAR	UNSIGNED8	RW	No
3360	Motor Enable Input Source	VAR	UNSIGNED8	RW	No
3361	Motor Enable Input Number	VAR	UNSIGNED8	RW	No
3362	Motor Enable Input Response	VAR	UNSIGNED8	RW	No
3F10	Number of Pole Pairs	VAR	UNSIGNED8	RW	No
3F11	Position Detection	VAR	UNSIGNED8	RW	No
3F12	Commutation Sequence	VAR	UNSIGNED8	RW	No
3F15	PWM Frequency	VAR	UNSIGNED16	RW	No
3610	Speed Regulator P Gain	VAR	FLOAT32	RW	No
3611	Speed Regulator I Gain	VAR	FLOAT32	RW	No
3612	Speed Regulator Open Loop Gain	VAR	FLOAT32	RW	No
3613	Current Regulator P Gain	VAR	FLOAT32	RW	No
3614	Current Regulator I Gain	VAR	FLOAT32	RW	No
3710	Ramp Up	VAR	UNSIGNED16	RW	No
3711	Ramp Down	VAR	UNSIGNED16	RW	No
2450	PID Tolerance	VAR	INTEGER16	RW	No
2451	PID Integral Gain	VAR	INTEGER16	RW	No
2452	PID Derivative Gain	VAR	INTEGER16	RW	No
2453	PID Target Source	VAR	UNSIGNED8	RW	No
2454	PID Target Number	VAR	UNSIGNED8	RW	No
2455	PID Feedback Source	VAR	UNSIGNED8	RW	No
2456	PID Feedback Number	VAR	UNSIGNED8	RW	No
2457	PID Control Response	VAR	UNSIGNED8	RW	No
2460	PID Output Field Value	VAR	INTEGER16	RO	Yes
2500	EC Extra Received Process Value	ARRAY	INTEGER16	RW	Yes
2502	EC Decimal Digits PV	ARRAY	UNSIGNED8	RW	No
2520	EC Scaling 1 PV	ARRAY	INTEGER16	RW	No
2522	EC Scaling 2 PV	ARRAY	INTEGER16	RW	No
5010	Constant Field Value	ARRAY	FLOAT32	RW	No
5011	Additional Data Field Value	ARRAY	FLOAT32	RO	Yes
5020	Power Supply FV	VAR	FLOAT32	RO	Yes
5030	CPU Temperature FV	VAR	FLOAT32	RO	Yes
5040	Fault Detection Field Value	ARRAY	UNSIGNED16	RO	Yes
5041	Fault Detection Set Threshold	ARRAY	UNSIGNED16	RW	No
5042	Fault Detection Clear Threshold	ARRAY	UNSIGNED16	RW	No
5050	Fault Detection Enable Err Check 3 Faults	ARRAY	UNSIGNED8	RW	No
5051	Fault Detection Error Response Delay	ARRAY	UNSIGNED16	RW	No
5555	Start in Operational Mode	VAR	BOOLEAN	RW	No
5556	Start in Operational NMT Delay	VAR	UNSIGNED16	RW	No

3.4.1. 2020h DI Pull Up Down Mode 1 Input Line

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2020	0	UINT8	RO	No	4	4	Number of subindexes
	1...4		RW		0–no pull 1 – Pull Up 2 – Pull Down	0	Input #1...#4 pull up / down selection

3.4.2. 2100h AI Input Range

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2100	0	UINT8	RO	No	4	4	Number of subindexes
	1...4		RW		Input type dependent	0	Input #1 ... #4 range selection

3.4.3. 2101h AI Number of Pulses per Revolution

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2101	0	UINT8	RO	No	4	4	Number of subindexes
	1...4	UINT16	RW		0-1000	0	Input #1 ... #4 PPR. When 0, no rpm conversion done

3.4.4. 2102h AI Decimal Digits FV

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2102	0	UINT8	RO	No	4	4	Number of subindexes
	1...4		RW		0-4	3	Input #1 ... #4 decimal digits FV

3.4.5. 2103h AI Debounce Filter

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2103	0	UINT8	RO	No	4	4	Number of subindexes
	1...4		RW		0-4	3	Input #1...#4 debounce filter selection

3.4.6. 2110h AI Error Detect Enable

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2110	0	UINT8	RO	No	4	4	Number of subindexes
	1...4		RW		0, 1	0	Input #1 ... #4 error detect enable

3.4.7. 2111h AI Error Clear Hysteresis

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2111	0	UINT8	RO	No	4	4	Number of subindexes
	1...4	INT16	RW		0-32767	100	Input #1 ... #4 error clear hysteresis

3.4.8. 2112h AI Error Reaction Delay

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2112	0	UINT8	RO	No	4	4	Number of subindexes
	1...4	UINT16	RW		0-60000	1000	Input #1 ... #4 error clear hysteresis

3.4.9. 2450h PID Tolerance

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2450	0	INT16	RW	No	0-100	10	Additional PID controller tolerance

3.4.10. 2451h PID Integral Gain

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2451	0	INT16	RW	No	0-100	10	Additional PID controller integral gain

3.4.11. 2452h PID Derivative Gain

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2452	0	INT16	RW	No	0-100	10	Additional PID controller derivative gain

3.4.12. 2453h PID Target Source

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2453	0	UINT8	RW	No	0-10	0	By default disabled. See

3.4.13. 2454h PID Target Number

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
4254	0	UINT8	RW	No	0-16	1	By default disabled. See

3.4.14. 2455h PID Feedback Source

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2455	0	UINT8	RW	No	0-10	0	By default disabled. See

3.4.15. 2456h PID Feedback Number

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
4256	0	UINT8	RW	No	0-16	1	By default disabled. See

3.4.16. 2457h PID Control Response

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
4257	0	UINT8	RW	No	0-3	0	Additional PID controller response selection

3.4.17. 2460h PID Output FV

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
4260	0	INT16	RO	No	0-1000	0	Additional PID controller output FV

3.4.18. 2500h EC Extra Received PV

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2500	0	UINT8	RO	Yes	11	11	Number of subindexes
	1...11	INT16	RW		INT16	0	Extra received PV 1 ... 11

3.4.19. 2502h EC Decimal Digits PV

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2502	0	UINT8	RO	No	11	11	Number of subindexes
	1...11		RW		0-3	1	Extra received PV 1 ... 11 decimal digits

3.4.20. 2520h EC Scaling 1 PV

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2520	0	UINT8	RO	No	11	11	Number of subindexes
	1...11	INT16	RW		INT16	0	EC 1 ... 11 process value scaler 1

3.4.21. 2522h EC Scaling 2 PV

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
2522	0	UINT8	RO	No	6	6	Number of subindexes
	1...11	INT16	RW		INT16	0	EC 1 ... 11 process value scaler 2

3.4.22. 3340h Motor Control Input Source

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3340	0	UINT8	RO	No	1	1	Number of subindexes
	1		RW		0-10	0	By default PDS FSA. See

3.4.23. 3341h Motor Control Input Number

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3341	0	UINT8	RO	No	1	1	Number of subindexes
	1		RW		0-16	1	By default control number #x. See

3.4.24. 3350h Motor Direction Input Source

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3350	0	UINT8	RO	No	1	1	Number of subindexes
	1		RW		0-10	0	By default PDS FSA. See

3.4.25. 3351h Motor Direction Input Number

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3351	0	UINT8	RO	No	1	1	Number of subindexes
	1		RW		0-16	0	By default control number #x. See

3.4.26. 3360h Motor Enable Input Source

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3360	0	UINT8	RO	No	1	1	Number of subindexes
	1		RW		0-10	0	By default PDS FSA. See

3.4.27. 3361h Motor Enable Input Number

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3361	0	UINT8	RO	No	1	1	Number of subindexes
	1		RW		0-16	0	By default control number #x. See

3.4.28. 3362h Motor Enable Input Response

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3362	0	UINT8	RO	No	1	1	Number of subindexes
	1		RW		0-1	0	0 – Enable when 'on' 1 – Enable when 'off'

3.4.29. 3610h Speed Regulator P Gain

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3610	0	UINT8	RO	No	3	3	Number of subindexes
	1	FLOAT32	RW		0-1000	0.4	Motor speed/velocity controller P gain

3.4.30. 3611h Speed Regulator I Gain

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3611	0	UINT8	RO	No	3	3	Number of subindexes
	1	FLOAT32	RW		0-1000	0.004	Motor speed/velocity controller I gain

3.4.31. 3612h Speed Regulator Open Loop Gain

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3612	0	UINT8	RO	No	3	3	Number of subindexes
	1	FLOAT32	RW		0-1000	1.0	Motor speed/velocity controller Open Loop gain

3.4.32. 3613h Current Regulator P Gain

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3613	0	UINT8	RO	No	3	3	Number of subindexes
	1	FLOAT32	RW		0-1000	1.0	Motor torque/current controller P gain

3.4.33. 3614h Current Regulator I Gain

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3614	0	UINT8	RO	No	3	3	Number of subindexes
	1	FLOAT32	RW		0-1000	0.0	Motor torque/current controller I gain

3.4.34. 3710h Ramp Up Time

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3710	0	UINT8	RO	No	3	3	Number of subindexes
	1	UINT16	RW		0-65000	100	Motor #x speed/velocity target value ramp up time in milliseconds

3.4.35. 3711h Ramp Down Time

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3711	0	UINT8	RO	No	3	3	Number of subindexes
	1	UINT16	RW		0-65000	100	Motor #x speed/velocity target value ramp down time in milliseconds

3.4.36. 3F10h Number of Pole Pairs

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3F10	0	UINT8	RW	No	0-32	4	Number of pole pairs in the brushless motor

3.4.37. 3F11h Position Detection

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3F11	0	UINT8	RW	No	0-1	0	0 – Use Hall sensors 1 – Sensorless motor drive

3.4.38. 3F12h Commutation Sequence

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3F12	0	UINT8	RW	No	0-5	1	Commutation sequence to use. See tables on page 10.

3.4.39. 3F15h PWM Frequency

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
3F15	0	UINT16	RW	No	8000-20000	10000	PWM frequency to use in motor driving in Hz.

3.4.40. 5010h Constant Field Value

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
5010	0	UINT8	RO	No	15	15	Number of subindexes User modifiable constant values to be used in custom control application.
	1	FLOAT32	RW		FLOAT32	0.0	
	2					1.0	
	3					10.0	
	4					20.0	
	5					30.0	
	6					40.0	
	7					50.0	
	8					60.0	
	9					70.0	
	10					80.0	
	11					90.0	
	12					100.0	
	13					110.0	
	14					120.0	
	15					130.0	

3.4.41. 5011h Additional Data Field Value

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
5011	0	UINT8	RO	No	16	16	Number of subindexes
	1	FLOAT32			FLOAT32	0	Not used
	2				0	Not used	
	3				0	Not used	
	4				0	Low level pwm duty cycle (0...32767)	
	5				0	Power	
	6				0	Internal status flags	
	7				0	Rpm error	
	8				0	Not used	
	9				0	Not used	
	10				0	Input QD data 1	
	11				0	Input QD data 2	
	12				0	Input QD data 3	
	13				0	Internal data #1	
	14				0	Internal data #2	
	15				0	Internal data #3	
16	0	Internal data #4					

3.4.42. 5020h Power Supply FV

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
5020	0	FLOAT32	RO	Yes	FLOAT32	0	Measured power supply voltage

3.4.43. 5030h CPU Temperature FV

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
5030	0	FLOAT32	RO	Yes	FLOAT32	0	Measured CPU internal temperature

3.4.44. 5040h FD Field Value

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
5040	0	UINT8	RO	No	3	3	Number of subindexes
	1	FLOAT32			FLOAT32	0	FD Field Value 1
	2				0	FD Field Value 2	
	3				0	FD Field Value 3	

3.4.45. 5041h FD Set Threshold

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
5041	0	UINT8	RO	No	3	3	Number of subindexes
	1	UINT16	RW		UINT16	1100	FD Set Threshold 1 (Temperature SET)
	2					500	FD Set Threshold 2 (VPS SET High)
	3					90	FD Set Threshold 3 (VPS SET Low)

3.4.46. 5042h FD Clear Threshold

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
5042	0	UINT8	RO	No	3	3	Number of subindexes
	1	UINT16	RW		UINT16	850	FD Set Threshold 1 (Temperature CLR)
	2					480	FD Set Threshold 2 (VPS CLR High)
	3					120	FD Set Threshold 3 (VPS CLR Low)

3.4.47. 5050h FD Enable 3 Faults

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
5050	0	UINT8	RO	No	2	2	Number of subindexes
	1		RW		0-31	7	Enable diagnostics: bit 0 – VPS bit 1 – CPU temperature
	2					31	Enable shutdowns: bit 0 – Power fault disables motor bit 1 – Power fault disables outputs bit 2 – Over temperature shutdown enable bit 3 – CAN fault disables motor bit 4 – CAN fault disables outputs

3.4.48. 5051h FD Error Response Delay

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
5051	0	UINT8	RO	No	3	3	Number of subindexes
	1	INT16	RW		0-600	10	FD Error response delay 1 (Temperature)
	2					10	FD Error response delay 2 (VPS)
	3					10	FD Error response delay 3

3.4.49. 5556h Start In Operational NMT Delay

Index	Subindex	Data Type	Access	PDO Mapping	Value Range	Default Value	Description
5556	0	UINT16	RW	No	0-65000	1000	Delay in milliseconds before sending the NMT message in case object 5555h is set to '2'.

APPENDIX A - TECHNICAL SPECIFICATION

Specifications are indicative and subject to change. Actual performance will vary depending on the application and operating conditions. Users should satisfy themselves that the product is suitable for use in the intended application. All our products carry a limited warranty against defects in material and workmanship. Please refer to our Warranty, Application Limitations & Return Materials Process as described on <https://www.axiomatic.com/service/>.

All specifications are typical at nominal input voltage and 25 °C unless otherwise specified.

Power Supply

Power Input	12, 24, or 48 VDC nominal (9 to 65 VDC range)
Surge Protection	Provided
Reverse Polarity Protection	Provided up to -100 VDC
Undervoltage Protection	Built-in

Inputs

Universal and Resistive Inputs	<p>4x universal inputs are user selectable as voltage, current, resistive, frequency, PWM, or digital types.</p> <p><u>Voltage Type:</u> Range: 0-5 or 0-10 VDC Resolution: 1 mV Accuracy: ± 1 % error The offset is in mV, and the resolution is mV/bit, when sending a CAN message. Input measurement setpoints are interpreted in V.</p> <p><u>Current Type:</u> Range: 0-20 or 4-20 mA Resolution: 1 μA Accuracy: ± 1 % error Current Sense Resistor: 249 Ω The offset is in mA, and the resolution is μA/bit, when sending a CAN message. Input measurement setpoints are interpreted in mA.</p> <p><u>Resistive Type:</u> Range: 20 Ω to 250 kΩ Accuracy: ± 1 % error Auto-ranging and self-calibration</p> <p><u>Frequency Type:</u> Range: 0.5 Hz to 15 kHz</p> <p><u>PWM Type:</u> Range: Up to 10 kHz Duty Cycle: 0 to 100 % Resolution: 0.01 % Accuracy: ± 1 % error</p> <p><u>Digital Type:</u> Normal, inverse, and latched Active high with 10 kΩ pull-up resistor or active low with 10 kΩ pull-down resistor These inputs can be used as an enable or direction command for the controller. The input accepted is active high (switch is connected to a +V signal when ON).</p> <p><u>Quadrature Encoder Type:</u> See "Motor Outputs and Feedback Inputs" below.</p> <p>Amplitude: up to +Vsupply 12-bit analog to digital resolution Protected against short to ground</p> <p>Input properties are user configurable. Any input on the controller can be sent as a CANopen® PDO to the CANopen® network.</p>
Ignition Switch Input	<p>The ignition key input turns the unit power ON. Minimum: 2.5 V Maximum: +Vps</p>
Input Ground	1x provided

Motor Outputs and Feedback Inputs

Output to Motor	<p>3-phase, H-bridge, current sensing per each phase Hall sensor or sensorless operation The maximum rated speed and motor rated current are configurable to suit individual motor specifications. Up to 480 W continuous output to the motor at 48 V output voltage (Power output will be lower at lower output voltages.)</p> <p>Short circuit protection is provided. Overcurrent protection is provided at 24 A.</p>
Motor Stop	Shut off with or without ramping
Motor Direction	Motor direction command can be mapped to any input or come from the CAN bus.
Motor Feedback Inputs	<p>Standard open collector/drain input type for Hall effect sensor 1 kΩ pull-up to +5 V per input +5 V supply and ground connection pins are provided.</p> <p>Sensorless operation is also available.</p> <p><u>Note:</u> The controller can read quadrature encoder using the Universal Input pins. (The Hall sensor inputs are separate and used only for reading rotor position information from a BLDC with Hall sensors.) The quadrature signals should be connected to Universal Input 1 and 2. This is the minimum configuration. It is also possible to connect the Index and Strobe signals from the encoder to Universal Inputs 3 and 4, but these are optional. The controller will detect Position Count, Direction, and Speed from the quadrature signals.</p>
Thermal Protection	Thermal protection is built-in and configurable.
Reference Voltage	1x +5 V, $\pm 0.5\%$, 200 mA

General Specifications

Microcontroller	TI TMS320F28069, 32-bit, 256 KB flash program memory, 100 KB RAM
CAN port	<p>1x CANopen® port</p> <p>SAE J1939 version: AX100280</p>
User Interface	An EDS file is provided to interface with the device using standard CANopen® tools.
Firmware Reflashing	The controller software can be reflashed over the CAN connection using the Axiomatic Electronic Assistant KIT – P/N: AX070502 or AX070506K.
Compliance	RoHS
Protection Rating	IP67
Operating Temperature	-40 to 125 °C (-40 to 257 °F)
Storage Temperature	-40 to 125 °C (-40 to 257 °F)
Weight	0.60 lb. (0.27 kg)
Enclosure	<p>TE Deutsch Enclosure (P/N: EEC-325X4B) High Temperature Nylon housing 4.68 in. x 5.25 in. x 1.42 in. (119 mm x 133 mm x 36 mm) (W x L x H excluding mating plugs) Refer to Dimensional Drawing.</p>
Mounting	<p>The motor controller should be mounted as close to the battery and/or the motor as possible. Install the unit with appropriate space available for servicing and for adequate wire harness access and strain relief.</p> <p>Mounting holes sized for ¼ in. or M6 bolts. The bolt length will be determined by the user's mounting plate thickness. The mounting flange of the controller is 0.63 in. (16 mm) thick. If the module is mounted without an enclosure, it should be mounted vertically with connectors facing left and right to reduce likelihood of moisture entry. The CAN wiring is considered intrinsically safe. The power wires are not considered intrinsically safe and so in hazardous locations, they need to be located in conduit or conduit trays at all times. The module must be mounted in an enclosure in hazardous locations for this purpose. All field wiring should be suitable for the operating temperature range.</p>
Electrical Connections	<p>24-pin receptacle (TE Deutsch P/N: DTM13-12PA-12PB-R008)</p> <p>Wires should be of the appropriate gauge to meet requirements of applicable electric codes and suit the specifications of the connector(s).</p>
Mating Plug KIT	<p>A mating plug KIT is available from Axiomatic under P/N: PL-DTM06-12SA-12SB. It consists of TE Deutsch P/Ns: DTM06-12SA, DTM06-12SB, 2x wedgelocks WM12S, and 24x contacts 0462-201-20141.</p> <p>20 AWG wire is recommended for use with contacts 0462-201-20141.</p>

Note: CANopen® is a registered community trademark of CAN in Automation e.V.

OUR PRODUCTS

AC/DC Power Supplies
Actuator Controls/Interfaces
Automotive Ethernet Interfaces
Battery Chargers
CAN Controls, Routers, Repeaters
CAN/WiFi, CAN/Bluetooth, Routers
Current/Voltage/PWM Converters
DC/DC Power Converters
Engine Temperature Scanners
Ethernet/CAN Converters,
Gateways, Switches
Fan Drive Controllers
Gateways, CAN/Modbus, RS-232
Gyroscopes, Inclinometers
Hydraulic Valve Controllers
Inclinometers, Triaxial
I/O Controls
LVDT Signal Converters
Machine Controls
Modbus, RS-422, RS-485 Controls
Motor Controls, Inverters
Power Supplies, DC/DC, AC/DC
PWM Signal Converters/Isolators
Resolver Signal Conditioners
Service Tools
Signal Conditioners, Converters
Strain Gauge CAN Controls
Surge Suppressors

OUR COMPANY

Axiomatic provides electronic machine control components to the off-highway, commercial vehicle, electric vehicle, power generator set, material handling, renewable energy and industrial OEM markets. ***We innovate with engineered and off-the-shelf machine controls that add value for our customers.***

QUALITY DESIGN AND MANUFACTURING

We have an ISO9001:2015 registered design/manufacturing facility in Canada.

WARRANTY, APPLICATION APPROVALS/LIMITATIONS

Axiomatic Technologies Corporation reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. Users should satisfy themselves that the product is suitable for use in the intended application. All our products carry a limited warranty against defects in material and workmanship. Please refer to our Warranty, Application Approvals/Limitations and Return Materials Process at <https://www.axiomatic.com/service/>.

COMPLIANCE

Product compliance details can be found in the product literature and/or on axiomatic.com. Any inquiries should be sent to sales@axiomatic.com.

SAFE USE

All products should be serviced by Axiomatic. Do not open the product and perform the service yourself.



This product can expose you to chemicals which are known in the State of California, USA to cause cancer and reproductive harm. For more information go to www.P65Warnings.ca.gov.

SERVICE

All products to be returned to Axiomatic require a Return Materials Authorization Number (RMA#) from rma@axiomatic.com. Please provide the following information when requesting an RMA number:

- Serial number, part number
- Runtime hours, description of problem
- Wiring set up diagram, application and other comments as needed

DISPOSAL

Axiomatic products are electronic waste. Please follow your local environmental waste and recycling laws, regulations and policies for safe disposal or recycling of electronic waste.

CONTACTS

Axiomatic Technologies Corporation
1445 Courtneypark Drive E.
Mississauga, ON
CANADA L5T 2E3
TEL: +1 905 602 9270
FAX: +1 905 602 9279
www.axiomatic.com
sales@axiomatic.com

Axiomatic Technologies Oy
Höytämöntie 6 C
33880 Lempäälä
FINLAND
TEL: +358 10 337 5751
www.axiomatic.com
salesfinland@axiomatic.com